

SALTER®

SINCE 1760

Knife Set and Block

Instruction Manual

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

Warning: Sharp blades; handle with care.

Keep out of the reach of children.

Knives are intended for domestic kitchen use only.

Always use a plastic or wooden cutting board to avoid blunting the blades.

Knives require regular sharpening and should be cleaned after each use.

The knives should be checked for damage before each use. If there are any signs of damage, they should be disposed of carefully.

Before First Use

Hand-wash carefully and dry thoroughly.

Cleaning and Maintenance

Not safe for dishwasher use.

Clean the knives in warm, soapy water with a soft cloth, rinse and dry thoroughly. Do not soak.

Do not use harsh or abrasive cleaning detergents or scourers. Wipe the knife block with a soft, damp cloth and dry thoroughly.

Storage

Store the knives carefully and safely in the knife block.

NOT TO BE SOLD TO ANY PERSONS UNDER THE AGE OF 18 (UK LEGISLATION).

KEEP OUT OF THE REACH OF CHILDREN.

Please retain this information for future reference.

If this product proves unsatisfactory or if you have any further queries, please contact your retailer.



Distributed by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.

CD121219/MD000000/V1