

SALTER®

SINCE 1760

GEO HEX 3 Piece Pan Set

Instruction Manual

BEFORE FIRST USE

Hand-wash thoroughly.

USING THE COOKWARE



Suitable for use on hobs only, including induction.

Not suitable for deep fat frying.

For optimum energy efficiency, place the cookware on hob rings equivalent to the base size.

Do not let flames overlap the sides or handles.

To increase the longevity of the cookware, it is recommended to use silicone, wooden or nylon utensils.

Do not overheat the cookware or allow to boil dry.

Never leave unattended whilst in use.

The non-stick coating is prone to discolouration. This has no effect on the functionality of the cookware.

To avoid damage to ceramic hobs, always lift the cookware rather than drag it across the hob surface.

Screws may loosen over time; using a screwdriver, carefully retighten them.

CLEANING AND STORING THE COOKWARE

Always allow to cool before cleaning. The cookware is safe for dishwasher use with mild detergents.

Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly.

Do not store wet cookware.

CAUTION

Always use heat-resistant oven gloves to move the cookware.

Never expose hot cookware to cold liquid.

If there is any evidence of damage to the cookware, dispose of it carefully.

Please retain this information for future reference.

If this product proves unsatisfactory or if you have any further queries, please contact your retailer.

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**

Edmund-Rumpler Straße 5, 51149 Köln. **Germany.**

salter.com

Made in China.

©Salter trademark. All rights reserved.

CD201022/MD000000/V1

