

SALTER[®]

SINCE 1760

MEGASTONE[®]

THERMO COLLAR

3 Piece Pan Set

Instruction Manual

Please retain instructions for future reference.

BEFORE FIRST USE

Hand-wash thoroughly.

USING THE COOKWARE

Suitable for use on hobs only, including induction.

Not suitable for deep fat frying.

For optimum energy efficiency, place the cookware on hob rings equivalent to the base size.

Do not let flames overlap the sides or handles.

To increase the longevity of the cookware, it is recommended to use silicone, wooden or nylon utensils.

Do not overheat the cookware or allow to boil dry.

Once the thermal indicator has changed colour, reduce the heat to maintain the temperature.

Never leave unattended whilst in use.

The non-stick coating is prone to discolouration. This has no effect on the functionality of the cookware.

To avoid damage to ceramic hobs, always lift the cookware rather than drag it across the hob surface.

Screws may loosen over time; using a screwdriver, carefully retighten them.

CLEANING AND STORING THE COOKWARE

Always allow to cool before cleaning.

The cookware is not safe for dishwasher use.

Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly.

Do not store wet cookware.

Imported & distributed by:
Brand Merchant Pty Ltd
Suite 8, 8 A St Andrews Street,
Brighton Victoria 3186, Australia.

www.brandmerchant.com.au

Made in China.

©Salter trademark. All rights reserved.

CD180122/MD241022/V4



CAUTION

Always use heat-resistant oven gloves to move the cookware. Never expose hot cookware to cold liquid.

If there is any evidence of damage to the cookware, dispose of it carefully.

LEGAL INFO

The Australian Consumer Law provides certain guarantees to consumers when they purchase goods and these guarantees cannot be excluded, restricted, or modified. These consumer guarantees are different to, and separate from, this warranty, which is given voluntarily by the Warrantor. The time limit of consumer guarantees varies depending on the price and quality of the goods and may extend beyond this warranty or any applicable warranty provided by the manufacturer of the goods. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. This warranty applies in addition to other rights and remedies you may have under the Australian Consumer Law or any other law.

Subject to the terms and conditions of this warranty, where your goods are defective within 12 months of your purchase, the Warrantor agrees to repair the goods, provide you with a replacement or provide you with store credit or a refund for the full amount of the purchase price (if it is not possible to repair the goods, or a replacement is unavailable). Except as required by law (including the Australian Consumer Law), our liability under this warranty shall not exceed the amount of the purchase price of the goods or the replacement of the goods with the same or a similar product.

Where your product purchase was made in a retail store, you should return the product to the place of purchase to obtain a repair, replacement, or refund.

Products purchased from us via a third-party marketplace platform, consumers should log in to their account and request a return using the marketplace platforms returns process. Upon receipt of your request, we will confirm the applicable next steps to obtain a repair, replacement or refund.