

# SALTER®

## SINCE 1760

### 3 Piece Pan Set

#### Instruction Manual

Please retain instructions for future reference.

#### **BEFORE FIRST USE**

Hand-wash thoroughly.

#### **USING THE COOKWARE**

Suitable for use on hobs only, including induction.

For optimum energy efficiency, place the cookware on hob rings equivalent to the base size. Do not let flames overlap the sides or handles.

To increase the longevity of the cookware, it is recommended to use silicone, wooden or nylon utensils.

Do not use metal utensils.

Do not overheat the cookware or allow to boil dry.

Never leave unattended whilst in use.

The non-stick coating is prone to discolouration. This has no effect on the functionality of the cookware.

To avoid damage to ceramic hobs, always lift the cookware rather than drag it across the hob surface.

Screws may loosen over time; using a screwdriver, carefully retighten them.

#### **CLEANING AND STORING THE COOKWARE**

Always allow to cool before cleaning.

This cookware is not dishwasher safe.

Hand-wash using a mild detergent and nonabrasive sponge, rinse and dry thoroughly. Do not store wet cookware.

#### **CAUTION**

Always use heat-resistant oven gloves to move the cookware. Never expose hot cookware to cold liquid.

If there is any evidence of damage to the cookware, dispose of it carefully.

UK ONLY



Recycle

Distributed by:  
UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester M1 4QQ, UK.  
Edmund-Rumpler Straße 5, 51149 Köln, Germany.

Made in China.

©Salter trademark. All rights reserved.

CD270323/MD000000/V1