


User manual

Electronic kitchen scale

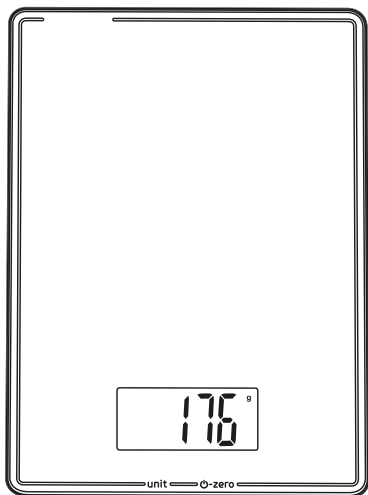

Please retain instructions for future reference.

SAFETY INSTRUCTIONS



BATTERY WARNING: KEEP OUT OF THE REACH OF CHILDREN.

- This product contains no user serviceable parts. Only a qualified electrician should attempt repairs.
- If any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- Do not place, store or use the product near direct sunlight or direct heat sources or in a damp/high humidity environment.
- This product is a high precision device; handle it with care.
- This product is intended for domestic use only.

BATTERY SAFETY

This product is supplied with 2 x AAA batteries. Only batteries of the same or equivalent type as those recommended should be used with this product.

Batteries are to be inserted with the correct polarity. Exhausted batteries should be removed from the product to avoid leakage.

Care and maintenance

Wipe the exterior of the scale with a soft, damp cloth and allow it to dry thoroughly.

Never immerse the scale in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers to clean the scale, as this could cause damage.

Before first use

Remove the plastic isolator tab from the battery compartment (if present) prior to use.

Make sure the batteries are inserted following the correct polarity. Position the scale on a firm flat surface.

Switching on the scale

To switch on the scale, press '0-ZERO'. Wait until display shows '0'.

Converting weight units

Press 'UNIT' to change between g, oz, ml and fl.oz. The ml and fl.oz measures are suitable for all water based liquids, eg. wine, stock and milk.


Using the Add and Weigh feature

To weigh several different ingredients in one bowl, press '0-ZERO' to reset the display between each ingredient.

Pairing a mobile device

STEP 1: Download and install the Salter Cook app on a mobile device.

STEP 2: Turn on Bluetooth in the settings menu on the mobile device.

STEP 3: Open the Salter Cook app and press  at the top of the screen.



NOTE: The scale can only be paired with one mobile device at a time and will automatically connect to the nearest device. Pressing the Bluetooth refresh icon will disconnect the scale from the mobile device and reconnect it to the nearest device.

Setting a target weight

Select any underlined weight from the Salter Cook app recipe by pressing and holding the weight. Target weights can also be set manually on the screen by sliding the target marker or touching the icon.

Switching off the scale

To switch off the scale manually, press '0-ZERO' for 2–3 seconds. Auto switch off will occur if the display shows '0' for 1 minute or the same weight reading for 3 minutes.



NOTE: The scale will not switch off if it is connected to the mobile device and the Salter Cook app is open.

Warning Indicators

Lo: Low power; change the batteries.

O-Ld: Max. weight capacity exceeded; remove some weight from the platform.

Negative load [-]: press '0-ZERO' to return to '0'.

Specifications

Product code: SA00607

Display: LCD

Battery: 2 x AAA

Units: g, lb.oz, ml, fl.oz



The Bluetooth® word, mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks are under license. Other trademarks and trade names are those of their respective owners.



Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD130224/MD280624/V2