

SALTER®

SINCE 1760

Bamboo Kitchen Scale

Instruction Manual

Please retain instructions for future reference.

Battery Safety

Do not short-circuit a cell or battery. Check that the battery compartment is secure.

If the battery compartment does not close securely, stop using the product and keep it away from children.

Batteries are to be inserted with the correct polarity.

Remove any batteries from the product when it is not being used for a long period of time to avoid leakage.

In the event of the batteries leaking, do not allow any liquid to come into contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice. Keep batteries out of the reach of children. Remember to keep button cell batteries away from children at all times as they can easily be swallowed.

If you think batteries have been swallowed or placed inside any part of the body, seek immediate medical attention.

Exhausted batteries must be removed and disposed of safely.



Do not crush, puncture, dismantle or otherwise damage batteries.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock. To dispose of any batteries, take them to a local recycling station. Contact the local government offices for details.

This product requires a 1 x CR2032 button cell battery (included).

Battery Safety Warning

 WARNING THIS PRODUCT CONTAINS A BUTTON/COIN BATTERY Swallowing can cause severe or fatal injuries within 2 hours. Keep batteries out of reach of children (whether new or used). If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.	
--	--

CAUTION: Vigilance must be maintained with "flat" or spare button or coin batteries in the home and the products that contain them. There are no obvious specific symptoms when a button or coin battery is stuck in a child's oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Excessive coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach
- Pain in their abdomen, chest or throat

- Tiredness and lethargy
- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.

Care and Maintenance

Wipe the exterior of the scale with a soft, damp cloth and allow to dry thoroughly. Never immerse the scale in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers to clean the scale, as this could cause damage.

Instructions for Use Before First Use

Remove the plastic isolator tab from the battery compartment (if present) prior to use; this will power up the scale. Make sure the batteries are inserted following the correct polarity.

Using the Bamboo Electronic Scale

STEP 1: Place the scale onto a flat, stable surface. If using a bowl, place on the scale.

STEP 2: Press **POWER** until the display reads 0 g.

STEP 3: To change between weight units (g, ml, lb, oz and fl oz), press **UNIT** located on the underside of the scale.

Using the Add and Weigh Feature

To weigh several different ingredients in one bowl, press **On/Off/Zero** to reset the display between each ingredient.

Switching Off the Bamboo Electronic Scale

To switch off the scale manually, press **On/Off/Zero** for 2–3 seconds. Auto switch off will occur if the display shows '0' for 1 minute or shows the same weight reading for 3 minutes.

Warning Indicators

unST: Unstable load. Remove, reset and reapply the load.

Err: Max. weight capacity exceeded.

Lo: Low power. Replace the batteries.

Specifications

Product code: SA00106SA

Display: LCD

Battery: 1 x CR2032 (included)

Units: g/oz/ml/fl.oz

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

EN If this product does not reach you in an acceptable condition, please contact our Customer Services Department at www.salterhousewares.co.uk. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

To be eligible for the extended guarantee, go to guarantee.upgs.com/salter and register your product within 30 days of purchase.



Manufactured by:
UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
GERMANY. 51149 Köln.

MADE IN CHINA.

©Salter trademark. All rights reserved.

CD220422/MD000000/V1

