

# SALTER®

## SINCE 1760

# Electronic Kitchen Scale

## Instruction Manual

Please retain instructions for future reference.

### Safety Instructions

**BATTERY WARNING: KEEP OUT OF THE REACH OF CHILDREN.**

This product contains no user serviceable parts. Only a qualified electrician should attempt repairs.

Do not place, store or use the product near direct sunlight or direct heat sources or in a damp/ high humidity environment.

This product is a high precision device; handle it with care.

This product is intended for domestic use only.

### Battery Safety

This product is supplied with 1 x CR2032 batteries. Only batteries of the same or equivalent type as those recommended should be used with this product.

Batteries are to be inserted with the correct polarity.

Exhausted batteries should be removed from the product to avoid leakage.

**WARNING**  
THIS PRODUCT CONTAINS  
A BUTTON/COIN BATTERY  
Swallowing can cause severe or fatal injuries  
within 2 hours.  
Keep batteries out of reach of children  
(whether new or used).  
If you think batteries may have been swallowed  
or placed inside any part of the body, seek  
immediate medical attention.



**IF A BUTTON/COIN BATTERY IS INGESTED, PLEASE CONTACT THE POISONS INFORMATION CENTRE ON 131126 IMMEDIATELY FOR FURTHER ADVICE ON WHAT ACTIONS TO TAKE.**

**WARNING: IF THE BATTERY COMPARTMENT DOES NOT CLOSE SECURELY, STOP USING THE PRODUCT AND KEEP IT AWAY FROM CHILDREN.**

**CAUTION: VIGILANCE MUST BE MAINTAINED WITH "FLAT" OR SPARE BUTTON OR COIN BATTERIES IN THE HOME AND THE PRODUCTS THAT CONTAIN THEM.**

There are no obvious specific symptoms when a button or coin battery is stuck in a child's oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach
- Pain in their abdomen, chest or throat
- Tiredness and lethargy
- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

These sorts of symptoms may fluctuate.

A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.

### Care and Maintenance

Wipe the exterior of the scale with a soft, damp cloth and allow it to dry thoroughly. Never immerse the scale in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers to clean the scale, as this could cause damage.

### Before First Use

Loosen the battery safety screw and open the battery compartment on the underside of the scale.

Remove the plastic isolator tab from the battery compartment (if present) prior to use.

Insert the batteries following the correct polarity, then close the battery compartment and tighten the battery safety screw.

Position the scale on a firm flat surface.

### Switching On the Electronic Kitchen Scale

To switch on the scale, press **[POWER/ZERO]**. Wait until display shows '0'.

### Converting Weight Units

Press **UNIT** to change between **g**, **lb.oz**, **ml** and **fl.oz**. The **ml** and **fl.oz** measures are suitable for all water based liquids, eg. wine, stock and milk.


### Using the Add and Weigh Feature

To weigh several different ingredients in one bowl, press **[POWER/ZERO]** to reset the display between each ingredient.

### Switching Off the Electronic Kitchen Scale

To switch off the scale manually, press **[POWER/ZERO]** for 2-3 seconds. Auto switch off will occur if display shows 0 for 1 minute or the same weight reading for 3 minutes.

### Warning Indicators

**Lo** or : Low power; change the batteries.

**Err** or **0-Ld** or **EEEE**: Max. weight capacity exceeded; remove some weight from the platform.

**----**: Negative load; press **[POWER/ZERO]** to return to '0'.

### Specifications

Product code: GENKITCHEN1

Display: LCD

Battery 1 x CR2032 coin cell battery

Units: g/ lb.oz/fl.oz/ml

If this product does not reach you in an acceptable condition please contact our Customer Services Department by [www.salterhousewares.com.au](http://www.salterhousewares.com.au).

Please have your delivery note to hand as details from it will be required.

If you wish to return this product please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).



SA00117



Imported and distributed by:  
Brand Merchant Pty Ltd, Genia Building, Corner Church & St Andrews Street,  
Brighton, Victoria 3186, AUSTRALIA,

**MADE IN CHINA,**

[www.salterhousewares.com.au](http://www.salterhousewares.com.au)

©Salter trademark. All rights reserved.

CD190722/MD140922/V2

