

Specifications

Product code: SA00607


Display: LCD

Battery: 2 x CR2032 (included)

Units: g, lb.oz, ml, fl.oz

User manual

Electronic kitchen scale

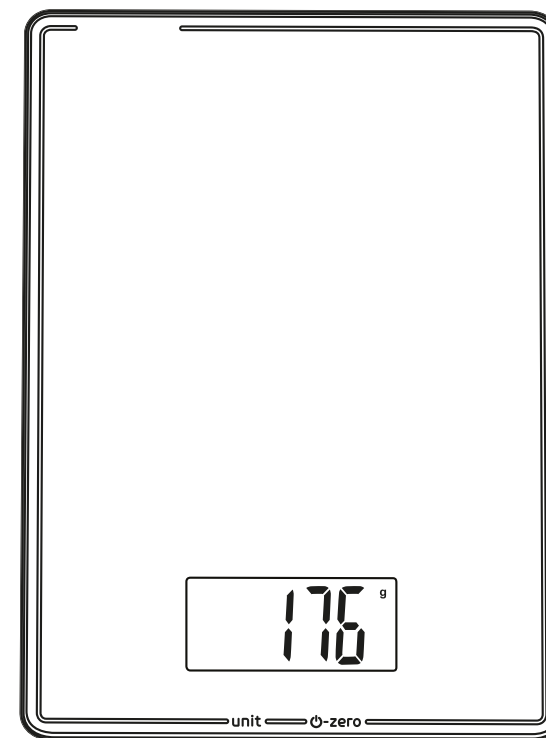

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



The Bluetooth® word, mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks are under license. Other trademarks and trade names are those of their respective owners.

Manufactured by:
Ultimate Products UK Ltd.,
Victoria Street, Manchester OL9 0DD. **UK.**
Ultimate Products Europe Ltd.,
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

MADE IN CHINA.

CD130224/MD000000/V1



Please retain instructions for future reference.

SAFETY INSTRUCTIONS



BATTERY WARNING: KEEP OUT OF THE REACH OF CHILDREN

- This product contains no user serviceable parts. Only a qualified electrician should attempt repairs.
- If any part of the product is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- Do not place, store or use the product near direct sunlight or direct heat sources or in a damp/ high humidity environment.
- This product is a high precision device; handle it with care.
- This product is intended for domestic use only.

BATTERY SAFETY

This product is supplied with 2 x CR2032 batteries. Only batteries of the same or equivalent type as those recommended should be used with this product. Batteries are to be inserted with the correct polarity. Exhausted batteries should be removed from the product to avoid leakage.



WARNING

THIS PRODUCT CONTAINS A BUTTON/COIN BATTERY

Swallowing can cause severe or fatal injuries within 2 hours. Keep batteries out of reach of children (whether new or used). If you think batteries may have been swallowed or placed inside any part of the body, seek immediate medical attention.



WARNING: If the battery compartment does not close securely, stop using the product and keep it away from children.

CAUTION: Vigilance must be maintained with “flat” or spare button or coin batteries in the home and the products that contain them.

There are no obvious specific symptoms when a button or coin battery is stuck in a child's oesophagus (food pipe). However, the child might exhibit the following symptoms:

- Coughing, gagging or drooling
- Appear to have a stomach upset or virus
- Vomiting
- Pointing to their throat or stomach
- Pain in their abdomen, chest or throat
- Tiredness and lethargy
- Be quieter or more clingy than usual
- Loss or reduction of appetite
- Refusal or inability to eat solid foods

These sorts of symptoms may fluctuate.

A specific symptom of button or coin battery ingestion is vomiting fresh (bright red) blood. Seek immediate medical attention if this occurs.

Care and maintenance

Wipe the exterior of the scale with a soft, damp cloth and allow it to dry thoroughly.

Never immerse the scale in water or any other liquid. Do not use harsh or abrasive cleaning detergents or scourers to clean the scale, as this could cause damage.

Before first use

Loosen the battery safety screw and open the battery compartment on the underside of the scale. Insert the batteries following the correct polarity, then close the battery compartment and tighten the battery safety screw.

Switching on the scale

Position the scale on a firm flat surface. To switch on the scale, press '⏻-ZERO'. Wait until display shows '0'.

Converting weight units

Press 'UNIT' to change between g, oz, ml and fl.oz. The ml and fl.oz measures are suitable for all water based liquids, eg. stock, milk and wine.



NOTE: To change between g, oz, ml and fl.oz in the Salter Cook app, tap the weight reading.

Using the Add and Weigh feature

To weigh several different ingredients in one bowl, press '⏻-ZERO' on the scale or in the Salter Cook app to reset the display between each ingredient.

Pairing a mobile device

STEP 1: Download and install the Salter Cook app on a mobile device.

STEP 2: Turn on Bluetooth in the settings menu on the mobile device.

STEP 3: Open the Salter Cook app and press '🔄' at the top of the screen.



NOTE: The scale can only be paired with one mobile device at a time and will automatically connect to the nearest device. Pressing the Bluetooth refresh icon will disconnect the scale from the mobile device and reconnect it to the nearest device.

Setting a target weight

Select any underlined weight from the Salter Cook app recipe by pressing and holding the weight. Target weights can also be set manually on the screen by sliding the target marker or touching the icon.

Switching off the scale

To switch off the scale manually, press '⏻-ZERO' for 2–3 seconds. Auto switch off will occur if the display shows '0' for 1 minute or the same weight reading for 3 minutes.



NOTE: The scale will not switch off if it is connected to the mobile device and the Salter Cook app is open.

Warning indicators

Lo: Low power; change the batteries.

O-Ld: Max. weight capacity exceeded; remove some weight from the platform.

Negative load [-]: press '⏻-ZERO' to return to '0'.