

SALTER®

SINCE 1760



2 in 1 Multi Vac

The perfect solution for floor-to-ceiling cleaning

SALTER®

2 in 1 Multi Vac

The perfect solution for floor-to-ceiling cleaning

CONTENTS	PAGE
Safety Instructions	3–4
Thermal Cut-out Device	4
Dos and Dont's	4–5
Care and Maintenance	5
Getting Started	5
In the Box	5
Features	5
Description of Parts	6
Instructions for Use	7
Before First Use	7
Using the 2 in 1 Multi Vac	7
Using the Aluminium Extension Tube	7
Using the Floor Brush	7
Using the Crevice Tool	8
Using the Dusting Brush	8
Emptying the Dust Container	8
Cleaning the HEPA Filter	8–9
Storage	9
Troubleshooting	9
Specifications	9
Wiring Page	10
Guarantee	11

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not use any accessories other than those supplied.

Do not fit any parts/accessories other than the parts supplied

with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Thermal Cut-out Device

If the dust container and HEPA filter are not cleaned on a regular basis, the 2 in 1 Multi Vac may overheat, which will cause the thermal cut-out device to activate due to restricted flow of air around the unit.

If the 2 in 1 Multi Vac cuts out, press the power button to turn the unit off and unplug it from the mains power supply.

Proceed to empty the dust container, clean the HEPA filter and allow the 2 in 1 Multi Vac to cool for approximately 1 hour before using again.

Dos and Don'ts

Do:

Check that the removable HEPA filter is kept clear of obstruction. Make sure that the dust tank and removable HEPA filter are cleaned regularly to preserve suction and prolong the life of the 2 in 1 Multi Vac.

Clean the dust container and removable HEPA filter at least once a month.

Don't:

Use the 2 in 1 Multi Vac without the removable HEPA filter or dust container in position.

Use the 2 in 1 Multi Vac to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects. Use the 2 in 1 Multi Vac to pick up water or any other liquid, as this poses risk of an electric shock.

Use the 2 in 1 Multi Vac if the dust container is filled past the Max. fill mark, as this could damage the unit or cause injury to the user.

Care and Maintenance

Wipe the external surface of the 2 in 1 Multi Vac with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents cleaning agents to clean any part of the 2 in 1 Multi Vac.

Make sure that the removable HEPA filter is kept clean after every removal of the dust container.

To clean the inside of the dust container, it is possible to remove the cyclonic cone.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

2 in 1 Multi Vac

Accessory attachment nozzle

Aluminium extension tube

Floor brush

Crevice tool

Dusting brush

Instruction manual

Features

600 W power

Ergonomic and lightweight

Removable 400 ml dust container


Aluminium extension tube

Floor brush, dusting brush and crevice tool

Washable HEPA filter

5 m power cord

Description of Parts

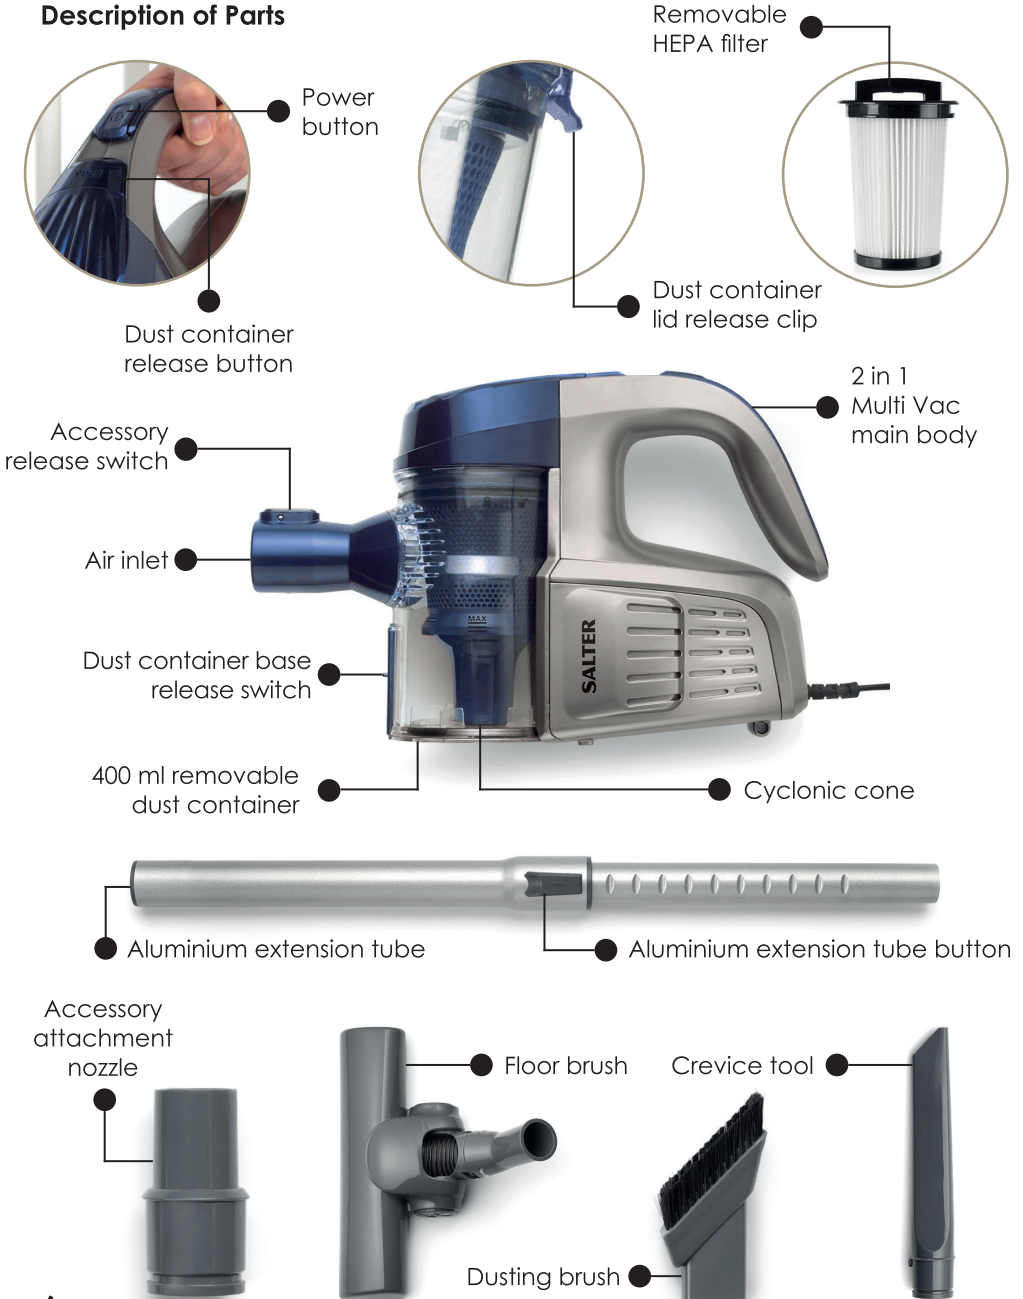

Instructions for Use

Before First Use

Before using the 2 in 1 Multi Vac for the first time, wipe it with a soft, damp cloth and dry thoroughly.

Do not immerse the 2 in 1 Multi Vac in water or any other liquid.

Using the 2 in 1 Multi Vac

STEP 1: Plug in and switch on the 2 in 1 Multi Vac at the mains power supply.

STEP 2: Turn on the 2 in 1 Multi Vac by pressing the power button. To turn off, press the power button again.

Note: The 2 in 1 Multi Vac comes preassembled; the accessory attachment nozzle should be fitted into position onto the air inlet before any of the accessories. If disassembled due to cleaning, switch off and unplug the 2 in 1 Multi Vac from the mains power supply before refitting the accessory attachment nozzle onto the air inlet.

Warning: Do not use the 2 in 1 Multi Vac without the removable HEPA filter or dust container in position. Make sure that the removable HEPA filter is regularly cleaned to preserve the suction and prolong the life of the 2 in 1 Multi Vac.

Using the Aluminium Extension Tube

The floor brush, crevice tool and dusting brush all fit onto the aluminium extension tube to help to reach into confined spaces, such as behind radiators or underneath car seats.

STEP 1: Fit the aluminium extension tube onto the accessory attachment nozzle.

STEP 2: Push the desired brush or tool onto the end of aluminium extension tube and secure into place.

STEP 3: Turn on the 2 in 1 Multi Vac by pressing the power button.

Using the Floor Brush

STEP 1: Fit the aluminium extension tube onto the accessory attachment nozzle.

STEP 2: Push the floor brush onto the end of the aluminium extension tube and secure into place.

STEP 3: Adjust the aluminium extension tube to the required length by pressing the aluminium extension tube button down and sliding the inner tube out.

STEP 4: Turn on the 2 in 1 Multi Vac by pressing the power button.

Using the Crevice Tool

The crevice tool is ideal for removing dust and dirt from folds in fabrics, radiators, corners, recesses and other places that are hard to reach.

STEP 1: Push the crevice tool onto the end of the aluminium extension tube or the end of the accessory attachment nozzle. If attaching the crevice tool to the accessory attachment nozzle, first remove the aluminium extension tube and then align the notch on the crevice tool with the slot on the accessory attachment nozzle.

STEP 2: Turn on the 2 in 1 Multi Vac by pressing the power button.

STEP 3: To remove the crevice tool, turn off the 2 in 1 Multi Vac by pressing the power button and then pull the crevice tool firmly from the end of the relevant attachment.

Using the Dusting Brush

The dusting brush is ideal for removing dust and dirt from shelves, cupboards and windowsills. The dusting brush can only be fitted onto the end of the crevice tool.

STEP 1: Attach the crevice tool by following the instructions in the section entitled 'Using the Crevice Tool'.

STEP 2: Push the dusting brush firmly onto the end of the crevice tool.

STEP 3: Turn on the 2 in 1 Multi Vac by pressing the power button.

STEP 4: To remove the dusting brush, turn off the 2 in 1 Multi Vac by pressing the power button and then pull the dusting brush firmly from the end of the crevice tool.

Emptying the Dust Container

Before emptying the dust container, switch off and unplug the 2 in 1 Multi Vac from the mains power supply. It is recommended to empty the dust container outdoors.

STEP 1: Whilst securely holding the 2 in 1 Multi Vac main unit, remove the dust container by pressing the dust container release button and pulling it away from the 2 in 1 Multi Vac.

STEP 2: Holding the dust container over a bin or refuse bag, push the dust container base release switch to open the dust container. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere.

STEP 3: To close the dust container, push the base closed until it locks back into position.

STEP 4: Replace the dust container by aligning the slot on the dust container with the clip on the 2 in 1 Multi Vac main unit and then push it in until it locks into position.

Cleaning the HEPA Filter

The HEPA filter can only be accessed when the dust container has been removed.

STEP 1: Remove the dust container by following the instructions in the section entitled 'Emptying the Dust Container'.

STEP 2: Once the dust container is empty, unclip the dust container lid by pushing the dust container lid release clip and then lift it away from the dust container.

STEP 3: Rotate the HEPA filter in an anticlockwise direction and pull it out of the cyclonic cone by the handle.

STEP 4: Shake the HEPA filter until the majority of the dust has been removed, then rinse under clean, warm water and allow it to dry naturally.

STEP 5: Once the HEPA filter is fully dry, slot it back into the cyclonic cone.

STEP 6: Reattach the lid to the dust container by aligning the slot on the front of the lid with the notch above the air inlet.

STEP 7: Push the lid firmly down to engage the clip on the reverse of the lid.

Note: Do not use the 2 in 1 Multi Vac unless the lid is securely in place.

Do not clean the HEPA filter using detergents or use external heat sources such as radiators to dry the HEPA filter.

Warning: Do not reassemble or use the 2 in 1 Multi Vac until the removable HEPA filter is fully dry, as this could cause damage.

Storage

Check that the 2 in 1 Multi Vac is cool, clean and dry before storing in a cool, dry place. Do not wrap the cord around the unit, as this could cause damage.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The accessory or air inlet is blocked. The dust container is almost full. The HEPA filter is blocked.	Disconnect the accessory and clear the blockage. Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'. Clean the HEPA filter following the instructions in the section entitled 'Cleaning the HEPA filter'.
The 2 in 1 Multi Vac has stopped working.	The thermal cut-out device has activated due to restricted airflow, and has cut power to the motor to protect the 2 in 1 Multi Vac.	Turn off and disconnect the 2 in 1 Multi Vac from the mains power supply. Empty the dust container and clean the HEPA filter. Allow the unit to cool for 1 hour.

Specifications

Product code: SAL0001

Rated voltage: 220–240 V ~ 50/60 Hz

Rated wattage: 600 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

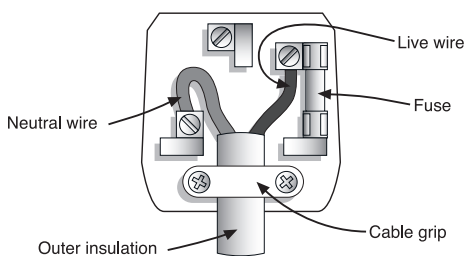

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.


Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



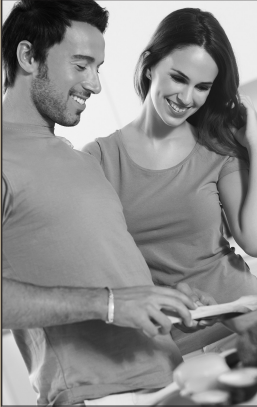

Congratulations on your purchase!

Go to <http://guarantee.upgs.com/salter>
to register your product for a 12 month guarantee

We have used over 250 years of experience and expertise
to provide you with this high quality product, designed with you in mind,
to make everyday life that little bit easier.

For our full range, visit www.salterhousewares.co.uk

SALTER®

SINCE 1760

Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



SALTER®

CD300916/MD190717/V4