

**SALTER®**  
SINCE 1760



## Window Cleaning Vac

The perfect solution for cleaning shower screens and mirrors

**SALTER®**

**Window Cleaning Vac**

The perfect solution for cleaning shower screen and mirrors

<b>CONTENTS</b>	<b>PAGE</b>
Safety Instructions	3–4
Battery Safety	5
Battery Removal and Disposal	5
Care and Maintenance	5–6
Getting Started	6
In the Box	6
Features	6
Description of Parts	6
Instructions For Use	7
Before First Use	7
Assembling the Window Cleaning Vac	7
Charging the Window Cleaning Vac	7
Using the Window Cleaning Vac	8
Emptying the Water Tank	8
Storage	8
Troubleshooting	9
Specifications	9
Guarantee	10

Please read all of the instructions carefully before use and retain for future reference.

This appliance is not designed to pick up spills. Only use this product in a vertical position; do not use it in a horizontal position.



If the product is used in a horizontal position, water may leak out of the vents. This could cause injury to the user or damage to the product.

Using the product in a horizontal position will void the warranty.



## Safety Instructions

When using electrical appliances basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power adaptor out of the reach of children.

Keep the appliance and its power adaptor away from heat or sharp edges that could cause damage.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquids, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance with hot water or caustic cleaning detergents.

Do not use the appliance for anything other than its intended use.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not leave the appliance unattended whilst connected to the mains power supply.

Always unplug the appliance after use and before any cleaning or maintenance.

The use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

This appliance is intended for wet pick up only. Do not use for picking up dust or other dry materials.



## **Battery Safety**

The supply terminals are not to be short-circuited. Exhausted batteries should be removed from the appliance to avoid leakage.

In the event of any batteries leaking, do not allow any liquid to come into contact with the skin or eyes.

If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Keep batteries out of the reach of children.

Avoid storing in direct sunlight.

Do not dispose of batteries in a fire.

Do not crush, puncture, dismantle or otherwise damage batteries.

Do not store above 60 °C.

Do not expose batteries to heat or fire as they may explode.

Do not subject batteries to mechanical shock.

Do not dispose of exhausted batteries in household waste.

To dispose of any batteries, take them to a local recycling station. Contact the local government offices for further details.

This appliance is fitted with a 3.7 V 2000 mAh Li-ion secondary (rechargeable) battery.

## **Battery Removal and Disposal**

The battery must be disposed of at the end of the appliances life.

To remove the battery from the Window Cleaning Vac, unfasten the screws and dismantle the appliance to gain access to the battery. This will require a cross-head screwdriver (not included).

Remove the battery and unclip the live and neutral terminal connections using electrically insulated cutters.

To dispose of the exhausted battery unit, take it to a local recycling station. Contact the local government offices for further details.

## **Care and Maintenance**

Always switch off and unplug the Window Cleaning Vac from the mains power supply before attempting any cleaning or maintenance.

**STEP 1:** Release the squeegee vacuum head by pressing the squeegee vacuum head locking tab/release button and pulling it upwards and away from the Window Cleaning Vac main body.

**STEP 2:** Wipe the Window Cleaning Vac main body, squeegee vacuum head and exterior of the water tank with a soft, damp cloth and allow to dry thoroughly.

**Note:** The Window Cleaning Vac should be cleaned after each use.

Do not use harsh or abrasive cleaners or detergents.

Never immerse the window vacuum main body in water or any other liquid.

## Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

## In the Box

Window Cleaning Vac main body  
Squeegee vacuum head


5.0 V 0.7 A DC power adaptor  
Instruction manual

## Features

Quick recharge time – just 2–3 hours charge provides up to 30 minutes continuous usage.  
Ergonomic and lightweight – cordless design for ease of use.

3.7 V rechargeable Li-ion battery – for a powerful and professional streak-free finish.  
60 ml water tank – easy to empty.

## Description of Parts

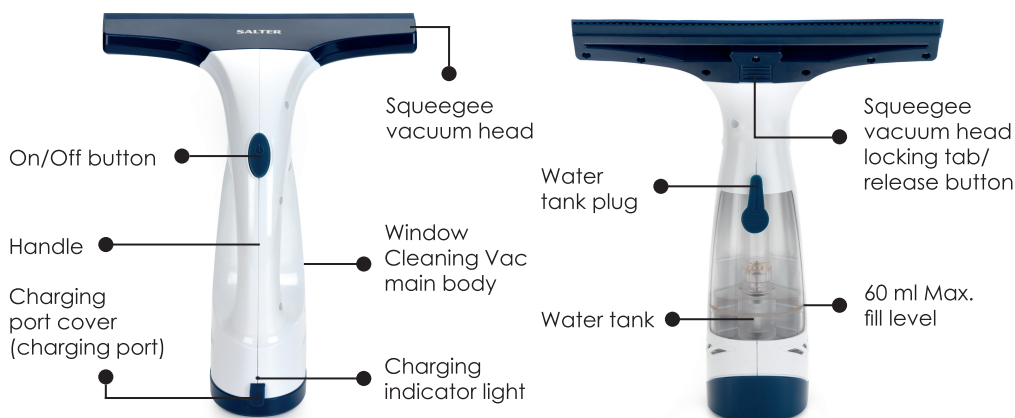

## Instructions for Use

### Before First Use

Before using the Window Cleaning Vac for the first time, wipe it with a soft, damp cloth and dry thoroughly.

Do not immerse the Window Cleaning Vac in water or any other liquid.

Check that the squeegee head is free from any debris (e.g. hair), as this could ruin the streak-free finish or damage the surface of the glass.

### Assembling the Window Cleaning Vac

**STEP 1:** Attach the squeegee vacuum head by pushing the squeegee head locking tab/release button and inserting it onto the top of the Window Cleaning Vac main body, until it locks into position. The screws on the underside of the squeegee vacuum head should be facing downwards.

**STEP 2:** Make sure that the water tank plug is firmly in place; failure to do so will result in water leaking from the unit, which could cause damage to the appliance or injury to the user.

**Note:** The squeegee vacuum head will only clip onto the Window Cleaning Vac main body one way.

### Charging the Window Cleaning Vac

Before first use, the Window Cleaning Vac must be charged for approx. 3 hours. Subsequent charging times will take approx. 2–3 hours.

**STEP 1:** Connect the lead from the mains power adaptor to the charging port on the Window Cleaning Vac.

**STEP 2:** Plug the mains power adaptor into the mains power supply; the indicator light will flash blue to signal that the battery is charging. Once the battery is fully charged, the indicator light will illuminate fully.

**Note:** Whilst charging, the Window Cleaning Vac may become warm.

**Caution:** Exercise caution when charging the Window Cleaning Vac; it must be stood upright on a dry, stable surface, away from other appliances.

**Warning:** Do not leave the Window Cleaning Vac unattended whilst it is charging. In the case of abnormal operation (e.g. it begins to emit smoke), switch off and unplug the Window Cleaning Vac from the mains power supply immediately.

Do not use any mains power adaptor other than that supplied, as this could cause a hazard.

## Using the Window Cleaning Vac

**STEP 1:** Switch off and unplug the Window Cleaning Vac from the mains power supply and then disconnect the mains power adaptor from the Window Cleaning Vac main body.

**STEP 2:** Dilute window cleaning concentrate following the manufacturer's instructions; apply to the window and loosen the dirt using a damp cloth.

**STEP 3:** To turn on the Window Cleaning Vac, press the 'On/Off' button.

**STEP 4:** Place the squeegee vacuum head against the window surface in a vertical position.

**STEP 5:** Clean the window from the top to bottom using long, straight, downward movements. This will avoid leaving drip marks or smears, and leave the window with a streak-free finish.

**STEP 6:** The Window Cleaning Vac can be used to remove any excess water that remains on the window surface. Whilst switched on, hold the Window Cleaning Vac vertically where the excess water has collected and allow it to suck up the liquid.

**STEP 7:** Turn off the Window Cleaning Vac by pressing the 'On/Off' button.

**Note:** Ensure that the water tank plug is firmly in position to avoid leakage of water from the tank.

**Warning:** Do not use the Window Cleaning Vac to pick up anything other than water or diluted window cleaning concentrate. It is recommended to use conventional window cleaning concentrate as opposed to spirit or foam detergents, as these can damage the Window Cleaning Vac and could result in injury to the user. Window cleaning concentrate is available from all leading retailers.

## Emptying the Water Tank

**STEP 1:** Switch off and unplug the Window Cleaning Vac from the mains power supply.

**STEP 2:** Unplug the water tank plug from the front of the water tank and tilt it to drain away any excess water.

**STEP 3:** Fix the water tank plug back on to the water tank.

**Note:** The water tank should be emptied after each use.

**Warning:** Do not allow the water tank to fill beyond the 60 ml Max. fill level, as this may cause water to leak from the vents and could damage the Window Cleaning Vac.

## Storage

Check that the Window Cleaning Vac is cool, clean and dry and that the water tank is empty before storing in a cool, dry place.

**Note:** If the battery is exhausted, it is recommended to charge the Window Cleaning Vac slightly before storage. This will help to prolong the life of the battery. The Window Cleaning Vac may need to be recharged after storage, before the next use.

## Troubleshooting

Symptom	Cause	Solution
The Window Cleaning Vac will not turn on.	The Window Cleaning Vac has run out of charge.	Charge the Window Cleaning Vac following the instructions in the section entitled 'Charging the Window Cleaning Vac'.
Water is leaking from the air vents.	<p>The water has exceeded the 60 ml Max. fill level.</p> <p>Spirit or foam detergent has been used to clean the surface of the mirror or window.</p> <p>The Window Cleaning Vac has been used horizontally.</p>	<p>Empty the water tank following the instructions in the section entitled 'Emptying the Water Tank'.</p> <p>Use conventional window cleaning concentrate as opposed to spirit or foam detergents.</p> <p>The Window Cleaning Vac must only be used in a vertical position during operation.</p>
The Window Cleaning Vac is leaving streaks on the surface.	<p>The rubber squeegee head is dirty.</p> <p>There is too much window cleaning concentrate on the surface of the mirror or window.</p>	<p>Clean the rubber squeegee head with a soft, damp cloth and leave to dry naturally.</p> <p>Adjust the dilution of the window cleaning concentrate.</p>

## Specifications

Product code: SAL0012V2

Battery: 3.7 V 2000 mAh Li-ion battery (included)

5.0 V 0.7 A DC charger (included)

Water tank volume: 60 ml

**UP Global Sourcing UK Ltd.,  
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

**Telephone:** 0161 934 2240\*

\*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

**Email:** [customercare@upgs.com](mailto:customercare@upgs.com)

**Fax:** 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

## **Guarantee**

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.





Go to [www.salterhousewares.co.uk](http://www.salterhousewares.co.uk)  
to register your product for a  
12 month guarantee.



Find us on 

[www.facebook.com/SalterCookshop](http://www.facebook.com/SalterCookshop)



Manufactured by:

UP Global Sourcing UK Ltd.,  
Victoria Street,  
Manchester OL9 0DD. UK.

Made in China.



**SALTER®**

CD080916/MD050517/V3