

SALTER®

SINCE 1760

**KILLS
BACTERIA**

CHEMICAL FREE

UP TO
12
TYPES OF
CLEANING
FUNCTIONS



12 in 1 Flexi Steam Cleaner

tion for chemical-free

SALTER®

12 in 1 Flexi Steam Cleaner

The perfect solution for
chemical-free cleaning

CONTENTS	PAGE
Safety Instructions	3–5
Care and Maintenance	5
Additional Risks	5–6
Descaling the Water Tank and Accessories	6
Removing Limescale	6
Cleaning the Anti-calc Filter	6–7
Getting Started	7
In the Box	7
Features	7
Description of Parts	8–9
Instructions for Use	10
Before First Use	10
Assembling the 12 in 1 Flexi Steam Cleaner	10
Attaching the Handle	10
Attaching the Rectangular-shaped Mop Head	10
Attaching the Microfibre Mop Head Pad	10–11
Filling the Water Tank	11
Using the 12 in 1 Flexi Steam Cleaner	12
As an Upright Steam Cleaner	12
As a Handheld Steam Cleaner	12–13
Storing the Power Cord	13
Accessories	14–15
Storage	15
Specifications	15
Notes	16

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Do not pull or carry the appliance by its power supply cord.

Do not immerse the appliance in water or any other liquid.

Do not expose the appliance to rain.

Do not operate the appliance with wet hands.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not use the appliance in an enclosed space filled with vapour given off by oil-based paint thinners, some mothproofing substances, flammable dust or other explosive or toxic vapours.

Do not use the appliance on leather, wax polished furniture or floors, unsealed vinyl floors, synthetic fabrics, velvet or other delicate, steam-sensitive materials.

Do not use the appliance on any unsealed hard floor surfaces or surfaces that have been treated with wax as the sheen may be removed by the heat and steam action. It is always recommended to test an isolated area of the surface to be cleaned before proceeding.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not touch any sections of the appliance that may become hot during use, as this could cause injury.

Do not direct steam at people or animals.

Do not direct steam towards equipment containing electrical components, such as the interior of ovens.

Always unplug the appliance after use and before any cleaning or maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Caution: Always wear suitable shoes when using the appliance and when changing the accessories. Do not wear slippers or open-toed footwear.

The appliance emits very hot steam; always exercise extreme caution during use.

Care and Maintenance

Before attempting any cleaning or maintenance, always unplug the steam cleaner from the mains power supply and allow it to cool sufficiently.

Drain any remaining water from the water tank once the steam cleaner main body has cooled and clean it after every use.

Wipe the steam cleaner main body with a soft, damp cloth and allow to dry thoroughly.

Clean the rectangular-shaped mop head in warm, soapy water; rinse and dry thoroughly.

The accessories are not suitable for dishwasher use.

Do not use harsh or abrasive cleaners or detergents.

The microfibre mop head pad is machine washable on a low heat setting. Always use a mild detergent and lay it flat to dry. Never use bleach or fabric softener when washing the microfibre mop head pad.

Warning: Do not turn on the steam cleaner during cleaning. Never immerse any electrical components in water or any other liquid.

Warning: Danger of scalding.

Additional Risks

Additional risks may arise when using this appliance, which may not be stated in the previous safety instructions. These risks can arise from misuse or prolonged operation of the appliance. Even when following the basic safety instructions highlighted

in this manual, some risks cannot be avoided. These include injury from touching hot surfaces, changing accessories or using the appliance for a long period of time. It is recommended that you take regular breaks during prolonged use of the appliance.



Steam



Caution: Hot surface

Descaling the Water Tank and Accessories

If living in a hard water area, calcium deposits may begin to build up inside the water tank or accessories. If this occurs, it is recommended to use demineralised water with the steam cleaner.

Removing Limescale

Limescale can develop over time and can affect the performance of the steam cleaner. It is recommended to remove limescale at least once a month.

When eradicating limescale, it is recommended to use a limescale removing solution that is suitable for use with a steam cleaner. Always follow the manufacturer's instructions.

Warning: Do not leave the steam cleaner unattended whilst removing limescale.

Cleaning the Anti-calc Filter

The anti-calc filter is located at the back of the steam cleaner, below the water tank cap.

Carefully lift out the anti-calc filter.

Soak the anti-calc filter in a limescale removing solution that is suitable for use with a steam cleaner for up to 4 hours, to make sure that all of the impurities are removed.

Once the anti-calc filter has been soaked in the limescale removing solution, reinsert it back into the main body and then run a continuous jet of steam to clear any remaining impurities.

Note: Do not use the steam cleaner without the anti-calc filter in place.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

12 in 1 Flexi Steam Cleaner

Handle

Rectangular-shaped mop head

2 microfibre mop head pads

Accessory adaptor

Straight nozzle

Wire round brush

Large round brush

Angled nozzle

Grouting tool

Scraping tool

Garment and upholstery steamer cloth

Window/mirror cleaner

Carpet glider

Measuring jug

Funnel

Instruction manual

Features

Ready to use in 25 seconds

Up to 15 minutes of continuous steam

Chemical-free cleaning

1300 W steam power

330 ml water tank

 
Variable steam control

Multifunctional – handheld and upright

5 m power cord

Includes 2 mop head pads, versatile accessories bundle and carpet glider

Description of Parts

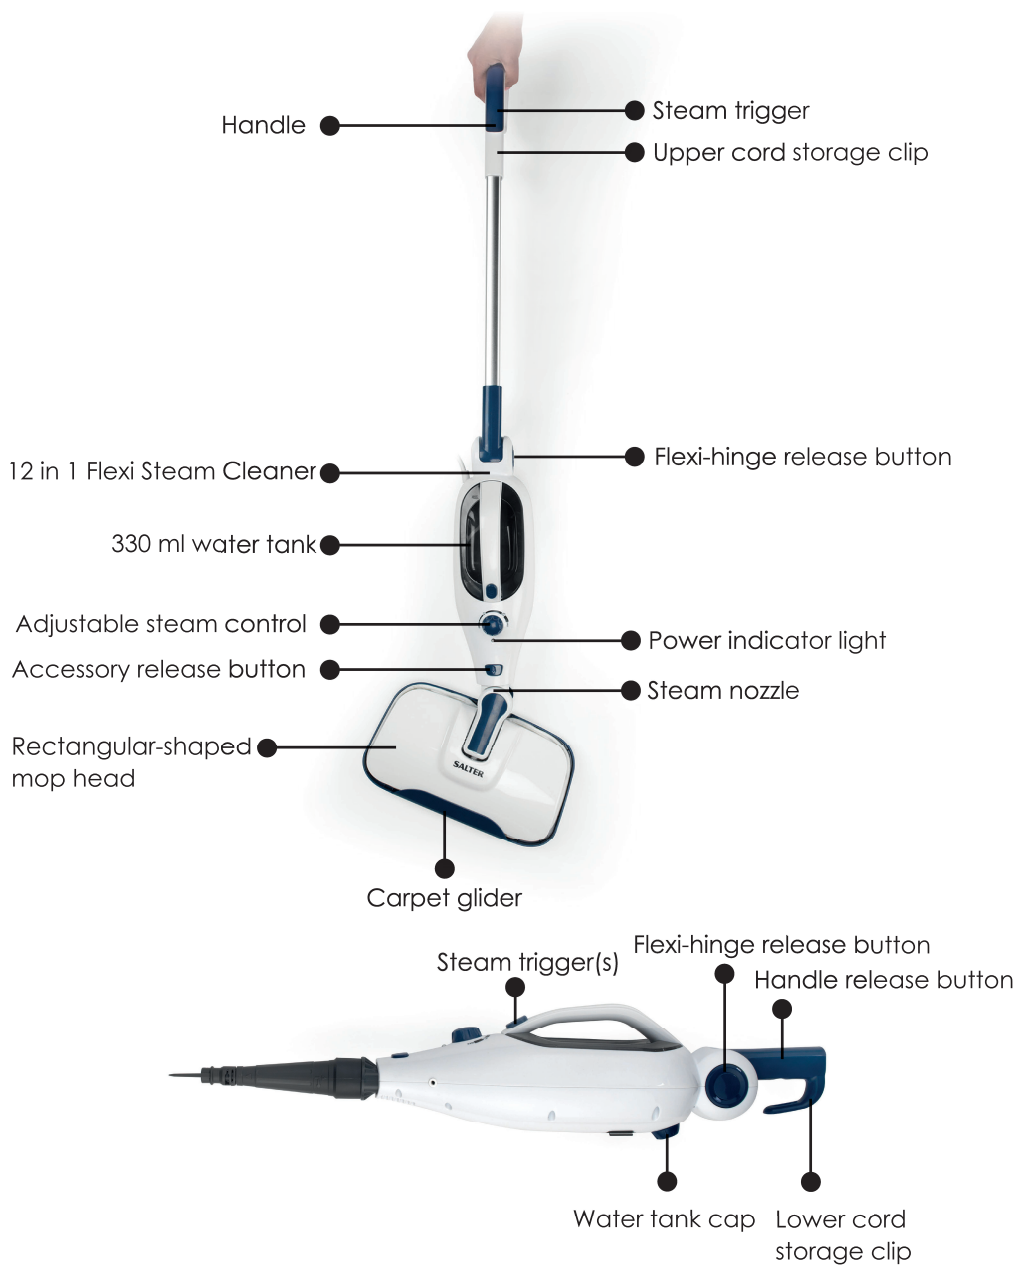

Window/mirror cleaner



Wire round brush

Large round brush



Accessory adaptor

Straight nozzle



Angled nozzle

Grouting tool



Scraping tool

Garment and upholstery steamer cloth



Microfibre mop head pad(s)

Measuring jug



Funnel

Instructions for Use

Before First Use

Before using the steam cleaner for the first time, clean the exterior surface with a soft, damp cloth and dry thoroughly.

Do not immerse the steam cleaner in water or any other liquid.

Assembling the 12 in 1 Flexi Steam Cleaner

Attaching the Handle

Insert the assembled handle into the steam cleaner main body, until it clicks into place.

Note: The assembled handle can be removed from the steam cleaner main body for storage by pressing the handle release button.

Attaching the Rectangular-shaped Mop Head

STEP 1: Slide the bottom end of the steam cleaner main body onto the rectangular-shaped mop head, until the mop head spindle clicks into place.

STEP 2: To remove the rectangular-shaped mop head, simultaneously press the accessory release button and pull the steam cleaner main body away in an upwards direction.

Note: Always attach the mop head using both hands, making sure that it is locked securely into position. The rectangular-shaped mop head will only fit one way onto the steam cleaner main body; check that it is correctly aligned.

Warning: Never force the steam cleaner main body onto the mop head, as this could damage the steam cleaner.

Attaching the Microfibre Mop Head Pad

STEP 1: Remove the rectangular-shaped mop head from the steam cleaner main body, following the instructions in the section entitled 'Attaching the Rectangular-shaped Mop Head'.

STEP 2: Attach the microfibre mop head pad to the rectangular-shaped mop head by aligning the hook and loop tabs.

STEP 3: Place the rectangular-shaped mop head, with the microfibre mop head pad attached, into the carpet glider and press down firmly to lock it into position.

STEP 4: Reattach the rectangular-shaped mop head to the steam cleaner main body following the instructions in the section entitled 'Attaching the Rectangular Shaped Mop Head'.

Note: The microfibre mop head pad must be installed correctly before use and the carpet glider should only be used on carpets. Check that the hook and loop tabs on the microfibre mop head pad are securely attached to those on the rectangular-shaped mop head.

If the carpet glider becomes loose during use, remove it along with the microfibre mop head pad and then reassemble, making sure that the microfibre mop head pad is visible at the back of the carpet glider.

Filling the Water Tank

Switch off and unplug the steam cleaner from the mains power supply before attempting to fill the water tank.

STEP 1: Position the steam cleaner main body horizontally on a flat, stable surface.

STEP 2: Carefully lift the water tank cap.

STEP 3: Fill the measuring jug.

STEP 4: Using the funnel, carefully pour the contents of the measuring jug into the water tank, making sure that it does not overflow. Repeat to reach the max. fill mark.

STEP 5: Gently press the water tank cap closed, until it is secure.

Note: The water may take a couple of seconds to rise; allow time for this before adding more to the water tank, making sure that it is not overfilled.

Caution: Do not attempt to fill the water tank whilst the steam cleaner is turned on, as this could cause damage to the unit or injury to the user.

Never add descaling, aromatic, alcoholic or detergent products into the appliance, as this may damage the appliance or make it unsafe for use.

Using the 12 in 1 Flexi Steam Cleaner

As an Upright Steam Cleaner

STEP 1: Assemble the steam cleaner following the instructions in the section entitled 'Assembling the 12 in 1 Flexi Steam Cleaner'.

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Plug in and switch on the steam cleaner at the mains power supply.

STEP 4: The steam cleaner features a flexi-hinge that is ideal for cleaning under furniture. Push the flexi-hinge fully together at both ends to activate it; deactivate the flexi-hinge by pressing the flexi-hinge button and straightening the handle.

STEP 5: Turn the adjustable steam control in a clockwise direction until the marker aligns with the 'On' symbol. The power indicator light will illuminate red, signalling that the steam cleaner is heating up. Once the steam cleaner has reached the correct temperature (this will take approx. 25 seconds), the power indicator light will illuminate green.

STEP 6: Control the flow of steam using the adjustable steam control; turn it in a clockwise direction to increase the amount of steam or turn it in an anticlockwise direction to reduce it.

STEP 7: Press the steam trigger on the handle to release steam.

As a Handheld Steam Cleaner

STEP 1: Remove the handle by pressing the handle release button and pulling it up and away from the steam cleaner main body.

STEP 2: Fill the water tank following the instructions in the section entitled 'Filling the Water Tank'.

STEP 3: Fully insert the accessory adaptor into the steam nozzle, until secure.

STEP 4: To attach the straight nozzle to the accessory adaptor, align the arrows on the accessory adaptor with the corresponding arrows on the straight nozzle and then push. Turn the straight nozzle in a clockwise direction, to secure it into position.

STEP 5: Attach the required accessory by aligning the arrows on the straight nozzle with the corresponding arrows on the accessory. Turn the accessory in a clockwise direction, to secure it into position.

STEP 6: Plug in and switch on the steam cleaner at the mains power supply.

STEP 7: Turn the adjustable steam control clockwise until the mark aligns with the 'On' symbol. The power indicator light will illuminate red, signalling that the steam cleaner is heating up. Once the steam cleaner has reached the correct temperature (approx. 25 seconds), the power indicator light will illuminate green.

STEP 8: Control the flow of steam using the adjustable steam control; turn it in a clockwise direction to increase the amount of steam or turn it in an anticlockwise direction to reduce it.

STEP 9: Press the steam trigger on the handle to release steam.

Note: A full water tank will supply approx. 15 minutes of continuous steam. Steam will run continuously until the water tank is empty or the adjustable steam control is in the 'Off' position.

Caution: Do not attempt to use the steam cleaner as a handheld steamer whilst the handle is inserted.
Never leave the appliance stationary on a floor area for longer than 15 seconds.
The handheld unit will become hot during use.

Storing the Power Cord

The steam cleaner is equipped with a handy cord storage system. To use it, simply wrap the power cord around the upper and lower cord hooks; the upper cord hook must be in the upright position. To unwrap the power cord and release it from the stored position, pull and twist the upper cord hook 180 ° in a clockwise direction.

Accessories

Accessory	Suggested Use	Further Usage Information
Accessory Adaptor		The accessory adaptor is the base attachment for all of the handheld accessories supplied with the steam cleaner.
Straight Nozzle	For cleaning awkward areas and crevices. Ideal for cleaning car alloys, surface sterilization and refreshing plants.	Attach any required accessory onto the straight nozzle.
Window/Mirror Cleaner	Ideal for a streak-free shine, cleaning shower screens, windows, mirrors and glass.	Always check that the glass is not cold or frozen and that the lowest steam setting is selected to prevent damage to the surface.
Wire Round Brush Large Round Brush	Both round brush accessories are perfect for cleaning hobs, showers, BBQs, taps and sanitaryware.	The wire round brush is best for removing ingrained dirt from hard surfaces. The large round brush is best for stubborn stains and removing residue from kitchen and bathroom surfaces. Always make sure that hot surfaces have cooled to room temperature before using the round brushes.
Angled Nozzle	Good for those hard-to-reach places, such as stovetops, sanitaryware, taps and sinks.	Can also be used to remove non-permanent stains on carpet or upholstery. Point the angled nozzle directly at the non-permanent stain, whilst holding a clean cloth near to the marked area to capture any loosened dirt.
Grouting Tool	Ideal for cleaning grout in kitchens and bathrooms. Ideal for tiles and grouting	Use on a low steam setting and apply light pressure.

Scraping Tool	Perfect for those extra-tough spills, removing baked-on food, grime and grease, residue or other hard- to-remove substances. Ideal for use on surfaces such as hobs.	Always make sure that hot surfaces have cooled to room temperature before using the scraping tool.
Garment and Upholstery Steamer Cloth	Steaming garments, curtains, tablecloths, carpets and upholstery.	Ideal for removing wrinkles from garments, leaving them crease-free and great for refreshing and cleaning upholstery.
Microfibre Mop Head Pad	For the general cleaning of hard floors.	Use a low steam setting for wood floors and a higher steam setting for tiled floors.
Carpet Glider	For ease of use on carpets.	To prevent carpets from becoming wet, use a low steam setting.

Warning: Exercise caution when using the wire round brush, as it has very sharp bristles. Never hold the wire round brush by the bristles; always use the steam cleaner main body.

Storage

Remove the microfibre mop head pad, making sure that it has been cleaned following the instructions in the section entitled 'Care and Maintenance'. Check that the steam cleaner is cool and dry and the water tank is empty before storing in a cool, dry place.

Specifications

Product Code: SAL0025

Input: 220–240 V ~ 50/60 Hz

Output: 1300 W

Water tank Capacity: 330 ml

Waterproof Level: IPX4

Notes:

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

 
The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

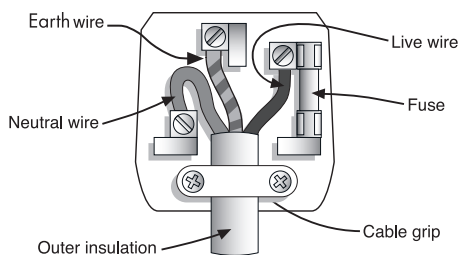

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



3
YEAR

GUARANTEE*

*To be eligible for the extended guarantee,
go to www.saltercookshop.com
and register your product
of purchase.

*To be eligible for the extended guarantee,
go to www.saltercookshop.com and register your
product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop



Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



SALTER®

CD180518/MD000000/V1



GLOBAL SOURCING
THE ULTIMATE WAY

Manchester
OL9 0DD
United Kingdom
www.upgs.com


t: +44 (0) 161 627 1400

f: +44 (0) 161 628 2126

hk: +852 6681 9752

cn: +86 1 3417586804

Artworker:	Raymond Cheung
Date:	22/05/18
Project Name:	EEF182837 UPG SAL0025
Type of Artwork:	Instruction Manual
Size:	A5 20 PP
Software Used:	Indesign CS6
Typefaces:	PR8 Charade, Century Gothic

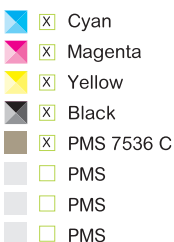 

Artwork Version **3**

Artwork Scale 1:1

©2018 UP Global Sourcing. All designs, images and artwork are the copyright of UP Global Sourcing. No copying, alterations or amendments to the artwork, design can be undertaken without prior written permission of UP Global Sourcing. Any costs incurred as a result of unauthorised amendments will be recovered from the supplier responsible.

DO NOT PRINT THIS PAGE
ARTWORK REFERENCE ONLY