

heston blumenthal

—precision—

by **SALTER®**

INDOOR/OUTDOOR 3 IN 1 TIMER

INSTRUCTION MANUAL

Please retain instructions for future reference.

Safety Instructions

BATTERY WARNING: KEEP OUT OF THE REACH OF CHILDREN

This product is not a toy.

This product contains no user serviceable parts.

Only a qualified electrician should attempt repairs.

Do not place, store or use the product near direct sunlight or direct heat sources or in a damp/high humidity environment.

This product is intended for domestic use only.

Battery Safety

This product is supplied with 2 x AA batteries. Only batteries of the same or equivalent type as those recommended should be used with this product.

Batteries are to be inserted with the correct polarity.

Exhausted batteries should be removed from the product to avoid leakage.

If the display begins to disappear or the alarm sounds faint, replace the batteries.

Care and Maintenance

Wipe the exterior of the timer with a soft, damp cloth and allow it to dry thoroughly.

Never immerse the timer in water or any other liquid.

Do not use harsh or abrasive cleaning detergents or scourers to clean the timer, as this could cause damage.


Before First Use

Remove the plastic isolator tab from the battery compartment (if present) prior to use.

Make sure the batteries are inserted following the correct polarity.

Modes

timer **Timer mode:** For regular count up or down timing.

 **'Turn 20' reminder mode:** A reminder to turn over food whilst cooking on high heat; helps to achieve evenly cooked food and juicier results.

 **Temperature reminder mode:** Sounds an alarm 85 % of the way through cooking times to remind users to check the temperature of the food.

Using the Timer Mode

STEP 1: Press **MODE** until **timer** is displayed.

STEP 2: Press **H** located on the left edge of the timer to set the hours and press **M** located on the right edge of the timer to set the minutes.

STEP 3: Press **▶||** to start the timer.

STEP 4: Press **▶||** again to pause, resume or silence the alarm.

Using the Count Up Timer

Make sure the display shows **00:00:00**, then press **▶||** to start timing.

Using Turn 20 Reminder Mode

STEP 1: Press **MODE** until **TURN 20** is displayed.

STEP 2: Once the food begins cooking, press ►|| to start the timer.

STEP 3: Rotate the food each time the alarm sounds or until the desired level of doneness is reached.

Using the Temperature Reminder Mode

STEP 1: Press **MODE** until **TEMPERATURE REMINDER** is displayed.

STEP 2: Press **H** to set the hours and **M** to set the minutes.

STEP 3: Press ►|| to start the timer once cooking has begun. An alarm will sound 85 % of the way through cooking times to remind users to check the temperature of the food.

STEP 4: Press ►|| to silence the alarm and allow the timer to run for the remainder of the cooking time.

Resetting to Zero

Press ►|| and **MODE** together to reset the display to **00:00:00**.

Specifications

Product code: 357

Display: LCD

Battery: 2 x AA batteries

EN If this product does not reach you in an acceptable condition, please contact our Customer Services Department at **salter.com**. Please have your delivery note to hand as details from it will be required. If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

*To be eligible for the extended guarantee, go to **guarantee.upgs.com/salter** and register your product within 30 days of purchase.

Disposal of Waste Batteries and Electrical and Electronic Equipment



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.



Points de collecte sur www.quefairedemesdechets.fr
Privilégiez la réparation ou le don de votre appareil !

Manufactured by:
UP Global Sourcing UK Ltd.,
UK, Manchester OL9 0DD.
Germany, 51149 Köln.

MADE IN CHINA.

www.salter.com

©Salter trademark. All rights reserved.



IT



MANUALE DI ISTRUZIONI

PAP 22

COLLEZIONE DI CARTE

CD020922/MD000000/V1