

SALTER®

SINCE 1760

3 IN 1 BARISTA DELUXE

Create aromatic
espresso at home

Compatible
with the
market-leading
capsules**



Please retain instructions for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the supply cord, plug or any part of the appliance is malfunctioning, or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance and its power supply cord out of the reach of children.

Keep the appliance out of the reach of children when it is switched on or cooling down.

Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.

Keep the power supply cord away from any parts of the appliance that may become hot during use.

Keep the appliance away from heat emitting appliances.

Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.

Do not immerse the electrical components of this appliance in water or any other liquid.

Do not operate the appliance with wet hands.

Do not expose the appliance to rain.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.

Do not pull or carry the appliance by its power supply cord.

Do not use the appliance if it has been dropped, if there are visible signs of damage or of it is leaking.

Do not use the appliance for anything other than its intended use.

Do not use any accessories other than those supplied.

Do not use this appliance outdoors.

Do not store the appliance in direct sunlight or in high humidity conditions.

Do not move the appliance when it is in use.

Do not place boiling water or very hot liquid in the appliance.

Do not fill the appliance above its max. fill mark. Overfilling the appliance may cause boiling water to be ejected.

Do not touch any sections of the appliance that may become hot during use, as this may cause injury.

Always unplug the appliance after use and before any cleaning or user maintenance.

Always ensure that the appliance has cooled fully after use before performing any cleaning or maintenance or storing away.

Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

The outer surface of the appliance may get hot during operation.

The heating element will remain hot after use.

Misuse of the appliance can lead to potential injury.

Prior to connecting or disconnecting the appliance from the mains power supply, ensure that all controls are switched off.



Caution: Hot surface – do not touch the hot section or heating components of the appliance.

Warning: Boiling water and steam can cause serious injury; exercise extreme caution when using this appliance.

Keep the appliance away from flammable materials.

The appliance will become very hot during use; do not touch the appliance and always take care when handling.

Care and Maintenance

Before attempting any cleaning or maintenance, unplug the coffee maker from the mains power supply and allow it to cool fully.

STEP 1: Wipe the coffee maker main unit with a soft, damp cloth and allow to dry thoroughly.

Do not immerse the coffee maker main unit in water or any other liquid.

Never use harsh or abrasive cleaning detergents or scourers to clean the coffee maker as this could cause damage.

STEP 2: Wash the pressurized funnel, water tank, coffee filter, coffee spoon, drip plate and drip tray in warm, soapy water, then rinse and dry thoroughly.

Removing Limescale

Limescale can develop over time and may affect the performance and lifespan of the coffee maker.

It is recommended to descale the coffee maker regularly, at least once every three months, especially if used in a hard water area. Frequent descaling will improve the performance and lifespan of the coffee maker.

STEP 1: Fill the water tank to the max. fill mark with cold water.

STEP 2: Add a commercial descaling agent, adhering to the manufacturer's instructions. It is not recommended to use vinegar to descale the coffee maker.

STEP 3: Follow the instructions outlined in the section entitled 'Using the Coffee maker' for making 2 cups of espresso, but without adding coffee. If desired, use the steam spout for approx. 30 seconds. Switch off the coffee maker and leave the remaining hot water to sit for approx. 15 minutes.

STEP 4: Empty the cups. Refill the water tank to the max. fill mark with clean water. Run the coffee maker at least twice more and pour the water away once it has cooled. The coffee maker should now be descaled, clean, and ready for use. If any traces of descaling product residue remain, run more clean water through the Coffee maker until it is completely clean.

Note: To cancel the descaling function press and hold the pump control button and the steam control button simultaneously for approx. 3 seconds. All indicator lights will flash 3 times simultaneously indicating the descaling function has been cancelled.

Description of Parts



1. 3 in 1 Barista Deluxe main unit
2. Water tank
3. Thermometer
4. Steam control button
5. Pump control button
6. On/off button
7. Power indicator light
8. Coffee indicator light
9. Steam indicator light
10. Steam control dial
11. Steam spout

12. Portafilter holder
13. Small filter (for 1 cup of ground coffee)
14. Large filter (for 2 cups of ground coffee)
15. Small coffee capsule box
16. Large coffee capsule filter holder
17. Cup rest
18. Drip plate
19. Coffee measuring spoon

Instructions for Use

Before First Use

STEP 1: Before using the coffee maker for the first time, remove the water tank and accessories and wash them in warm, soapy water, then rinse and dry thoroughly.

STEP 2: Wipe the coffee maker main unit with a soft, damp cloth and allow to dry thoroughly.

Using the 3 in 1 Barista Deluxe with Ground Coffee

STEP 1: Plug in and switch on the coffee maker at the mains power supply. Press the on/off button to turn the coffee maker on; the power indicator light will illuminate to signal that the coffee maker is in operation. Place a suitably sized cup onto the drip plate directly under the coffee dispensing holes and wait for the thermostat to reach 80–120 °C.

STEP 2: Place the desired filter (small or large) in the portafilter holder and add ground coffee using the coffee measuring spoon. Place the portafilter holder into the slot on the coffee machine and turn 90 ° in an anticlockwise direction until it is locked into place.

STEP 3: Once the coffee maker is at the correct temperature to produce coffee, push the pump control button to begin the coffee dispensing process.

STEP 4: Once the desired amount of coffee has dripped from the dispensing holes into the coffee cup, push the pump control button to halt the dispensing process and remove the cup from the drip plate. It is recommended to wait 1–2 minutes before doing this to allow the coffee maker to cool and let any excess water drip into the coffee cup. Take care when handling the coffee cup as it is likely to become hot during operation.

STEP 5: Carefully serve the coffee as desired.

Using the 3 in 1 Barista Deluxe with Small Coffee Capsules

The small coffee capsule box fits capsules sized 32 x 30 mm.

STEP 1: Put a small coffee capsule into the small coffee capsule box, tighten the lid and place inside the filter holder.

STEP 2: Place the filter holder into the slot on the espresso machine and turn 90 ° in an anticlockwise direction until it is locked into place.

STEP 3: Follow Steps 4 and 5 in the section entitled 'Using the Coffee maker with Ground Coffee'.

Using the 3 in 1 Barista Deluxe with Large Coffee Capsules

The large coffee capsule filter holder fits a capsule size of 54 x 37 mm.

STEP 1: Pierce the capsule cover in numerous places, position the large coffee capsule into the large coffee capsule filter holder and then secure the lid.

STEP 2: Place the Dolce Gusto capsule filter holder into the slot on the espresso machine and turn 90 ° in an anticlockwise direction until it is locked into place.

STEP 3: Follow Steps 4 and 5 in the section entitled 'Using the Coffee maker with Ground Coffee'.

Steaming Milk

Whole milk can be steamed for serving flat whites, cappuccinos and lattes.

STEP 1: With the steam dial set to the '0' position, pour the required amount of water into the water tank. Press the steam control button and wait for the thermostat to reach 120–200 °C and the indicator light to turn green.

STEP 2: Place the required amount of milk into a heatproof container with a handle, and position at the end of the steam spout. The steam spout should be submerged at least 2 cm in the milk.

STEP 3: Turn the steam control dial in an anticlockwise direction to produce more steam, leaving the steam spout submerged in the milk.

STEP 4: Gently move the steam spout up and down; the milk will be steamed, making it hot and frothy.

STEP 5: Once the milk has reached the desired temperature, turn the steam control dial back to the '0' position.

STEP 6: Carefully, remove the steam spout from the milk. The milk can now be used to make coffee. Wipe off any residue left on the steam spout once it has cooled.

Note: The milk may double in volume whilst steaming; make sure the heatproof container is sufficiently underfilled to allow for this.

Always hold the heatproof container by its handle, as the milk becomes very hot.

Be careful not to burn the milk. Milk makes a distinctive sound when it reaches boiling point, at which point the steam dial should be turned to '0'.

Once the desired amount of coffee has dripped from the dispensing holes into the coffee cup(s), push the pump control button to halt the dispensing process.

Hints and Tips

1. Always use fresh, cold water to fill the water tank.
2. The quantity of ground coffee can be adapted to taste. For stronger coffee, use more ground; for weaker coffee use less ground coffee.
3. If using regular ground coffee, more is needed per cup to achieve the same strength as finer ground coffee.
4. After using packaged ground coffee, tightly reseal it and store in a cool, dry place.
5. To achieve optimum coffee taste, use whole coffee beans and finely grind them before brewing.
6. Do not reuse ground coffee or loose tea that has already been used in the coffee maker, as this will greatly reduce the flavour of the coffee.
7. Reheating coffee is not recommended, as it affects the taste.

Storage

The coffee maker must be cool, clean and dry before storing in a cool, dry place. Never wrap the cord tightly around the coffee maker; wrap it loosely to avoid causing damage.

Troubleshooting

Problem	Possible Cause	Solution
The coffee filter overflows or coffee brews slowly.	Excessive amounts of ground coffee have been used.	Remove some of the coffee from the reusable coffee filter and clean it following the instructions in the section entitled 'Care and Maintenance'.
	Flavoured or decaffeinated coffee has been used or coffee has been ground too finely.	Use less ground coffee when brewing decaffeinated, flavoured, or finely ground coffee.
The coffee tastes poor.	The coffee maker or coffee filter are dirty.	Clean the coffee maker and coffee filter following the instructions in the section entitled 'Care and Maintenance'.
	The coffee used is ground too finely or too coarsely.	Use medium ground coffee.
	The coffee-to-water ratio is not balanced.	Adjust the coffee-to-water ratio, to taste.
	The coffee is not fresh or is poor quality.	Use fresh coffee or try using a different type of coffee.
	The water is poor quality.	Fill the coffee maker from a different water source.

Coffee will not brew, and the coffee maker will not turn on.	<p>The water tank is empty.</p> <p>The coffee maker is unplugged.</p> <p>There has been a power surge.</p> <p>The pump control button is compressed.</p>	<p>Fill the water tank.</p> <p>Plug in the coffee maker.</p> <p>Unplug the coffee maker and plug back in.</p> <p>Make sure the pump control button is switched off.</p>
Water is coming out of the steam spout.	The coffee maker has not reached a high enough temperature to produce steam.	<p>Wait until the steam indicator light illuminates before turning the steam control dial. The steam spout may need to be turned on for approx. 20 seconds before steam is produced.</p>

Storage

Product code: EK4620

Operating voltage: 220–240 V ~ 50Hz

Power: 1050 W

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

Green/Yellow Earth (\perp)

FOR UK USE ONLY - Plug fitting details (where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.

The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.


The wire coloured **GREEN/YELLOW** must be connected to the terminal marked with the letter **E** or marked \perp .

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

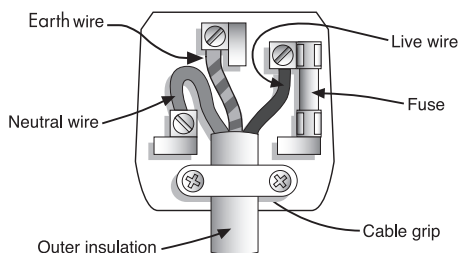

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use an ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department at **www.saltercookshop.com**

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheellie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee, go to **www.saltercookshop.com** and register your product within 30 days of purchase.



Find us on 

www.facebook.com/SalterCookshop

SALTER®

Manufactured by:

UP Global Sourcing UK Ltd.,
UK. Manchester OL9 0DD.
Germany. 51149 Köln.

Made in China.

