


# User manual

Air fryer

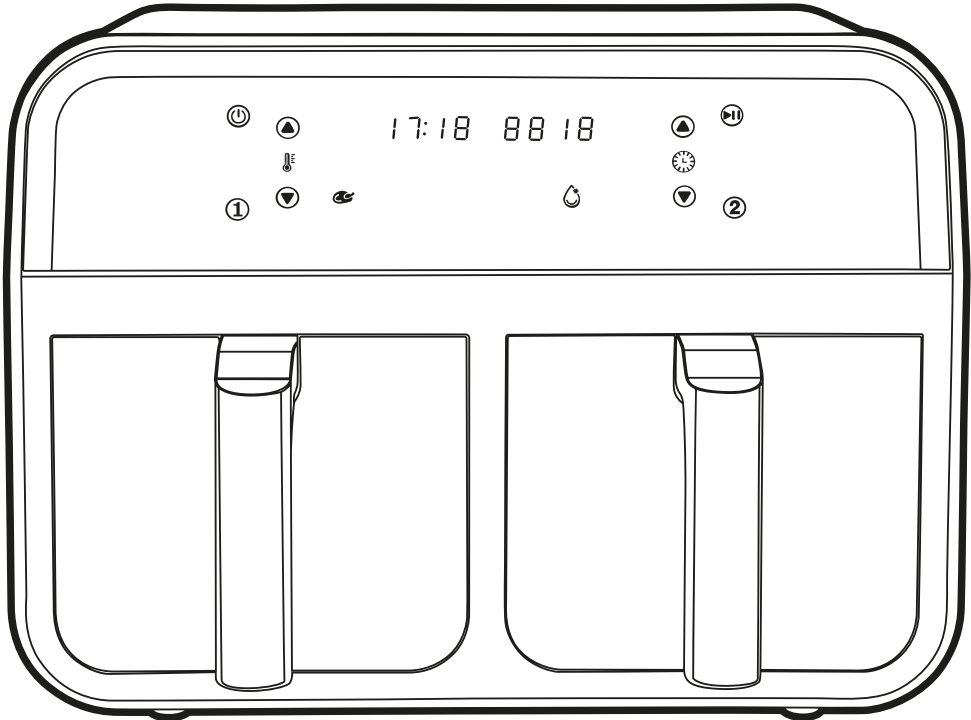

## Description of parts

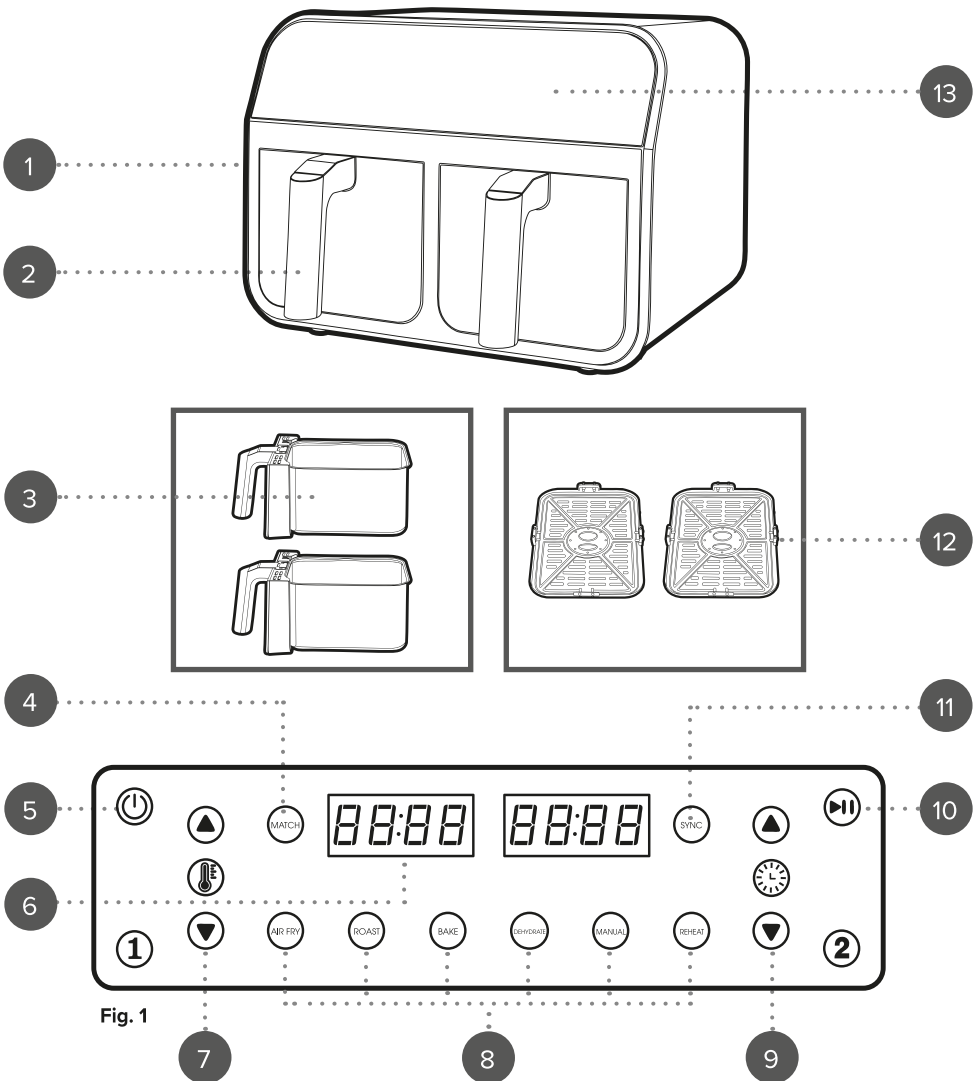


Fig. 1

- |                                 |  |
|---------------------------------|--|
| 1. Air fryer main unit          | 8. Function buttons                        |
| 2. Cooking compartment handle   | 9. Time control buttons                    |
| 3. Cooking compartment (qty. 2) | 10. Start/pause button                     |
| 4. Match cook button            | 11. Sync cook button                       |
| 5. Power button                 | 12. Non-stick coated cooking tray (qty. 2) |
| 6. LED display                  | 13. Digital control panel                  |
| 7. Temperature control buttons  |  |

Please retain instructions for future reference.

## **SAFETY INSTRUCTIONS**

- When using electrical appliances, basic safety precautions should always be followed.
- Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities and knowledge, if they have been supervised/instructed and understand the hazards involved.
- Children shall not play with the appliance.
- Children should not perform cleaning or user maintenance, unless they are older than 8 and supervised.
- This appliance is not a toy.
- If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, cease using the product immediately to avoid potential injury.
- This appliance contains no user serviceable parts, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.
- Keep the appliance and its power supply cord out of the reach of children.
- Keep the appliance out of the reach of children when it is switched on or cooling down.
- Keep the appliance and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the appliance that may become hot during use.
- Keep the appliance away from other heat emitting appliances.
- Do not allow the power supply cord to hang over worktops, touch hot surfaces or become twisted.
- Do not immerse the electrical components of the appliance in water or any other liquid.
- Do not operate the appliance with wet hands or if any connections are wet.
- If this appliance falls or accidentally becomes immersed in water, unplug it from the wall outlet immediately. Do not reach into the water.
- Do not leave the appliance unattended whilst connected to the mains power supply.
- Do not remove the appliance from the mains power supply by pulling the cord; switch it off and remove the plug by hand.
- Do not pull or carry the appliance by its power supply cord.
- Do not use the appliance for anything other than its intended use.
- Do not use any accessories other than those supplied.
- Do not use this appliance outdoors.
- Do not store the appliance in direct sunlight or in high humidity conditions.
- Do not move the appliance whilst it is in use.
- Always unplug the appliance after use and allow it to cool fully before any cleaning, user maintenance or storing away.

- Always use the appliance on a stable, heat-resistant surface, at a height that is comfortable for the user.
- This appliance should not be operated by means of an external timer or separate remote control system.
- Use of an extension cord with the appliance is not recommended.
- This appliance is intended for domestic use only. It should not be used for commercial purposes.



**CAUTION:** Hot surface – do not touch hot sections or heating components of the appliance.



**WARNING:** Keep the appliance away from flammable materials.

### Dos and don'ts

#### DO:

Check that the cooking compartments are securely fitted before use. Not doing so will prevent the air fryer from operating.

Only hold the cooking compartments by the cooking compartment handle.

Take care when removing the cooking compartments, as steam may be emitted.

#### DON'T:


Invert the cooking compartments with the non-stick coated cooking trays still attached, as they may fall out and excess oil that may have collected in the bottom of the cooking compartments may pour out onto the plate.

Cover the air fryer or its air inlets, as this will disrupt the airflow and could affect the cooking results.

Fill the cooking compartments with oil or any other liquid.

Touch the cooking compartments during or straight after use, as they get very hot. Only hold each cooking compartment by the cooking compartment handle.

Use air fryer liners or similar products.

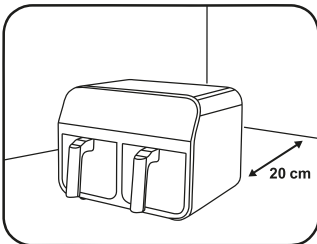

**WARNING:** ENSURE THAT THE AIR FRYER HAS AT LEAST 20 CM OF FREE SPACE IN ALL DIRECTIONS BEFORE USE.

### Automatic switch-off

The air fryer is fitted with an automatic switch-off. This may activate if the set cooking time has elapsed, causing the timer to sound and the automatic switch-off to activate, turning off the air fryer.



**NOTE:** If the air fryer needs to be turned off before the set cooking time has elapsed, switch off and unplug it from the mains power supply.

## Care and maintenance

Before attempting any cleaning or maintenance, switch off and unplug the air fryer from the mains power supply and allow it to fully cool.

**STEP 1:** Wipe the air fryer main unit with a soft, damp cloth and dry thoroughly.

**STEP 2:** Clean the non-stick coated cooking trays and the cooking compartments in warm, soapy water, then rinse and dry thoroughly.

Never use harsh or abrasive cleaning detergents or scourers to clean the air fryer or its accessories, as this could cause damage.



**NOTE:** The air fryer should be cleaned after each use.

## Instructions for use

### Before first use

Clean the air fryer following the instructions outlined in the section entitled '**Care and maintenance**'.



**NOTE:** When using the air fryer for the first time, a slight smoke or odour may be emitted. This is normal and will soon subside. Allow for sufficient ventilation around the air fryer during use. It is advised to run the air fryer without food for approx. 10 minutes before first use; this will prevent the initial smoke or odour from affecting the taste of the food.

### Assembling the air fryer

**STEP 1:** Fit the non-stick coated cooking trays into the cooking compartments, checking that they are seated securely.

**STEP 2:** Slide the cooking compartments into the air fryer main unit, checking that the cooking compartment numbers match the display numbers.



**NOTE:** The air fryer comes preassembled. The cooking compartments should be closed securely before use, as not doing so will prevent the air fryer from working.

### Using the control panel

See **Fig. 1**.

When the air fryer is plugged in and switched on at the mains power supply, the unit will beep and the power button will illuminate to indicate that it is being powered.

Tap the power button to switch on the air fryer.

### Manual setting

The time and temperature can be set manually; time and temperature values are dependent on the food being cooked.

Lines will appear on the LED display, indicating the air fryer is ready to be programmed.

Select the relevant compartment by tapping '**1**' or '**2**'. To adjust the setting manually, press the manual button then the time control buttons to change the cooking time, up to a max. of 60 mins (or up to a max. of 12 hours for dehydration). Tap the temperature control buttons to adjust the cooking temperature, from 40 to 210 °C (or max. 90 °C for dehydration).

To use only one compartment, do not select any settings for the other.

Press the start/pause button to begin cooking.



**NOTE:** Refer to the recipe booklet for additional information and cooking guidelines.

## Preset functions

Time and temperature settings can be set using the function buttons, which automatically cycle between time and temperature presets for cooking various foods when pressed. These presets can then be adjusted using the time and temperature control buttons as required.

The time and temperature control buttons may be held down in order to quickly adjust the time or temperature.

Once time and temperature have been set, press the start/pause button to begin heating. Time and temperature can be changed during use.

Once cooking is complete and the preset time has elapsed, the timer will sound and the air fryer will switch off.

During cooking, the time and temperature can be adjusted at any time by tapping the drawer number and using the time and temperature control buttons.

If the cooking compartment is removed during cooking, cooking will be paused; reinsert the cooking compartment to resume the cooking process.

To switch off the air fryer, press and hold the power button.

## Cooking functions

| Function  | Preset temperature | Temperature range | Time          |
|-----------|--------------------|-------------------|---------------|
| Air Fry   | 210 °C             | 80–210 °C         | Max. 1 hour   |
| Roast     | 190 °C             | 120–210 °C        | Max. 4 hours  |
| Bake      | 160 °C             | 120–210 °C        | Max. 4 hours  |
| Dehydrate | 60 °C              | 40–90 °C          | Max. 12 hours |
| Manual    | 180 °C             | 40–210 °C         | Max. 1 hour   |
| Reheat    | 170 °C             | 130–210 °C        | Max. 1 hour   |

## Using the sync cook setting

When cooking different foods in each compartment with different times and temperatures, use the 'sync' setting so that both compartments finish cooking at the same time.

Use the sync setting when using both cooking compartments to cook different foods; cooking will finish at the same time for both compartments.

**STEP 1:** Tap '1' and set the required settings for the first cooking compartment, following the instructions in the section entitled 'Using the control panel'.

**STEP 2:** Repeat for the second cooking compartment by tapping '2'.

**STEP 3:** Press the sync cook button; the button will illuminate to signal that the setting has been selected.

**STEP 4:** Press the start/pause button to begin cooking.

## Using the match cook setting

Use the match setting when using both cooking compartments to cook the same foods; cooking will finish at the same time for both compartments.

**STEP 1:** Tap '1' and set the required settings for the first cooking compartment, following the instructions in the section entitled 'Using the control panel'.

**STEP 2:** Press the match cook button; the button will illuminate to signal that the setting has been selected.

**STEP 3:** Press the start/pause button to begin cooking.



**NOTE:** The power button will remain illuminated whilst the air fryer is plugged in.

## Using the air fryer

**STEP 1:** Plug in and switch on the air fryer at the mains power supply; the air fryer will beep, and the power button will illuminate to indicate that the unit is plugged in.

**STEP 2:** Tap the power button to switch on the air fryer; the display functions will show, indicating the air fryer is ready to be programmed.

**STEP 3:** Following the instructions in the section entitled '**Using the control panel**', use the time and temperature control buttons to increase or decrease the time or temperature as required.

**STEP 4:** Remove the cooking compartments by pulling it out of the air fryer using the handle. Position the cooking compartments onto a flat, stable, heat-resistant surface.

**STEP 5:** Place the ingredients into the non-stick coated cooking tray and then slide the cooking compartments back into the air fryer main unit to close it.

**STEP 6:** Use the digital control panel to set the cooking time and temperature as required for the ingredients. Time and temperature settings can also be set using the function buttons, which automatically cycle between time and temperature presets for cooking various foods when pressed. These presets can then be adjusted using the time and temperature control buttons as required.

**STEP 7:** Some ingredients may require shaking halfway through the cooking time. Remove the cooking compartments from the air fryer main unit using the cooking compartment handle. Shake the cooking compartments gently and then slide back into the air fryer main unit to continue cooking.

**STEP 8:** Once cooking is complete and the preset time has elapsed, the air fryer will beep several times and show '**END**' on the display. The air fryer will then switch off. Check whether the ingredients are ready; if the ingredients are not cooked, close the cooking compartments and replace back into the air fryer main unit. Use the digital control panel to adjust the cooking time accordingly. If the food is cooked, empty the contents into a bowl or onto a plate. Use a pair of heat-resistant tongs (not included) if the food is large or fragile.



**NOTE:** If the cooking time or temperature setting needs to be changed during use, use the time and temperature control buttons, as required.



**CAUTION:** Do not tip the food directly into a bowl or onto a plate, as excess oil may collect at the bottom of the cooking compartments and leak onto the ingredients or serving bowl. Exercise caution when opening and closing the cooking compartments during use, as it will become very hot.

**WARNING:** Nominal voltage is still present even when the air fryer is switched off. To permanently switch off the air fryer, switch off and unplug from the mains power supply.

## Storage

Check that the air fryer is cool, clean and dry before storing in a cool, dry place.

Never wrap the cord tightly around the air fryer; wrap it loosely to avoid causing damage.

## Specifications

Product code: EK4750

Input: 220–240 V ~ 50/60 Hz

Output: 2200–2400 W



**Disposal of Waste Batteries and Electrical and Electronic Equipment**



This symbol on the product, its batteries or its packaging means that this product and any batteries it contains must not be disposed of with household waste. Instead, it is the user's responsibility to hand this over to an applicable collection point for the recycling of batteries and electrical and electronic equipment. This separate collection and recycling will help to conserve natural resources and prevent potential negative consequences for human health and the environment due to the possible presence of hazardous substances in batteries and electrical and electronic equipment, which could be caused by inappropriate disposal. Some retailers provide take-back services which allow the user to return exhausted equipment for appropriate disposal. **It is the user's responsibility to delete any data on electrical and electronic equipment prior to disposal.** For more information about where to drop batteries, electrical and electronic waste off, please contact the local city/municipality office, household waste disposal service, or the retailer.

Manufactured by:  
Ultimate Products UK Ltd.,  
Victoria Street, Manchester OL9 0DD. **UK.**  
Ultimate Products Europe Ltd.,  
19 Baggot Street Lower, Dublin D02 X658. **ROI.**

**MADE IN CHINA.**

CD010322/MD310524/V5