

SALTER®

SINCE 1760

CYCLONIC



TECHNOLOGY

POWERFUL DUST,
DIRT AND PARTICLE
SEPARATION



Compact Pet⁺

The perfect cleaning solution for homes with pets

SALTER[®]

Compact Pet⁺

The perfect cleaning solution for homes with pets

CONTENTS	PAGE
Safety Instructions	3–4
Care and Maintenance	4
Thermal Cut-out Device	5
Getting Started	5
In the Box	5
Features	5
Description of Parts	6
Instructions for Use	7
Before First Use	7
Assembling the Compact Pet ⁺	7
Using the Telescopic Extension Tube	7
Using the Floor Brush	7–8
Using the 2 in 1 Brush and Crevice Tool	8
Using the Pet Turbo Brush	8
Cleaning the Pet Turbo Brush	8–9
Emptying the Dust Container	9
Cleaning the HEPA Filter	9–10
Cleaning the HEPA Exhaust Filter	10
Cord Storage	10
Troubleshooting	11
Specifications	11
Notes	12
Wiring Page	13
Guarantee	14

Please read all of the instructions carefully and retain for future reference.

Safety Instructions

When using electrical appliances, basic safety precautions should always be followed.

Check that the voltage indicated on the rating plate corresponds with that of the local network before connecting the appliance to the mains power supply.

Children aged from 8 years and people with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this appliance, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Unless they are older than 8 and supervised, children should not perform cleaning or user maintenance.

This appliance is not a toy.

This appliance contains no user serviceable parts. If the power supply cord, plug or any part of the appliance is malfunctioning or if it has been dropped or damaged, only a qualified electrician should carry out repairs. Improper repairs may place the user at risk of harm.

Keep the appliance out of the reach of children.

Keep the appliance and its supply cord away from heat or sharp edges that could cause damage.

Keep the appliance free from dust, lint, hair or anything that may reduce the airflow of the appliance.

Do not use the appliance with wet hands.

Do not use this appliance if any of the openings are blocked.

Do not use the appliance to pick up flammable liquid, matches, cigarette ends, hot ashes or any hot, burning or smoking objects.

Do not use this appliance to pick up hard, sharp objects such as glass or nails etc.

Do not fit any parts/accessories other than the parts supplied with this appliance, as this may cause damage.

Do not use the appliance to pick up water or any other liquid, as this poses risk of an electric shock.

Do not immerse the appliance in water or any other liquid.

Do not use the appliance for anything other than its intended use.

Do not use this appliance outdoors.

Do not leave the appliance unattended whilst connected to the mains power supply.

Do not remove from the mains power supply by pulling the cord; switch off and remove the plug by hand.

Do not store the appliance in direct sunlight or in high humidity conditions.

Always unplug the appliance after use and before any cleaning or maintenance.

Use of an extension cord with the appliance is not recommended.

This appliance should not be operated by means of an external timer or separate remote control system.

This appliance is intended for domestic use only. It should not be used for commercial purposes.

Care and Maintenance

Wipe the external surface of the Compact Pet+ with a soft, damp cloth and allow to dry thoroughly.

Do not use any harsh or abrasive detergents cleaning agents to clean any part of the Compact Pet+

Ensure that the filters are kept clean and are replaced when they become worn.

Thermal Cut-out Device

If the dust container and filters are not cleaned on a regular basis, the Compact Pet⁺ may overheat, which will cause the thermal cut-out device to activate due to restricted air flow due to blocked air inlets.

If the Compact Pet⁺ cuts out, press the power button to turn it off, and unplug it from the mains power supply. Once cool, proceed to empty the dust container, clean the HEPA filter and the HEPA exhaust filter. Allow the Compact Pet⁺ to cool for approximately 1 hour before using again.

Getting Started

Remove the appliance from the box.

Remove any packaging from the appliance.

Place the packaging inside the box and either store or dispose of safely.

In the Box

Compact Pet⁺

Flexible hose

Telescopic extension tube

High efficiency floor brush

2 in 1 brush and crevice tool

Pet turbo brush

Instruction manual

Features

700 W power

Ergonomic and lightweight

Removable 1.5 litre dust container


Telescopic extension tube

Floor brush, pet turbo brush and 2 in 1 brush and crevice tool

HEPA exhaust filter

5 m power cord

Description of Parts

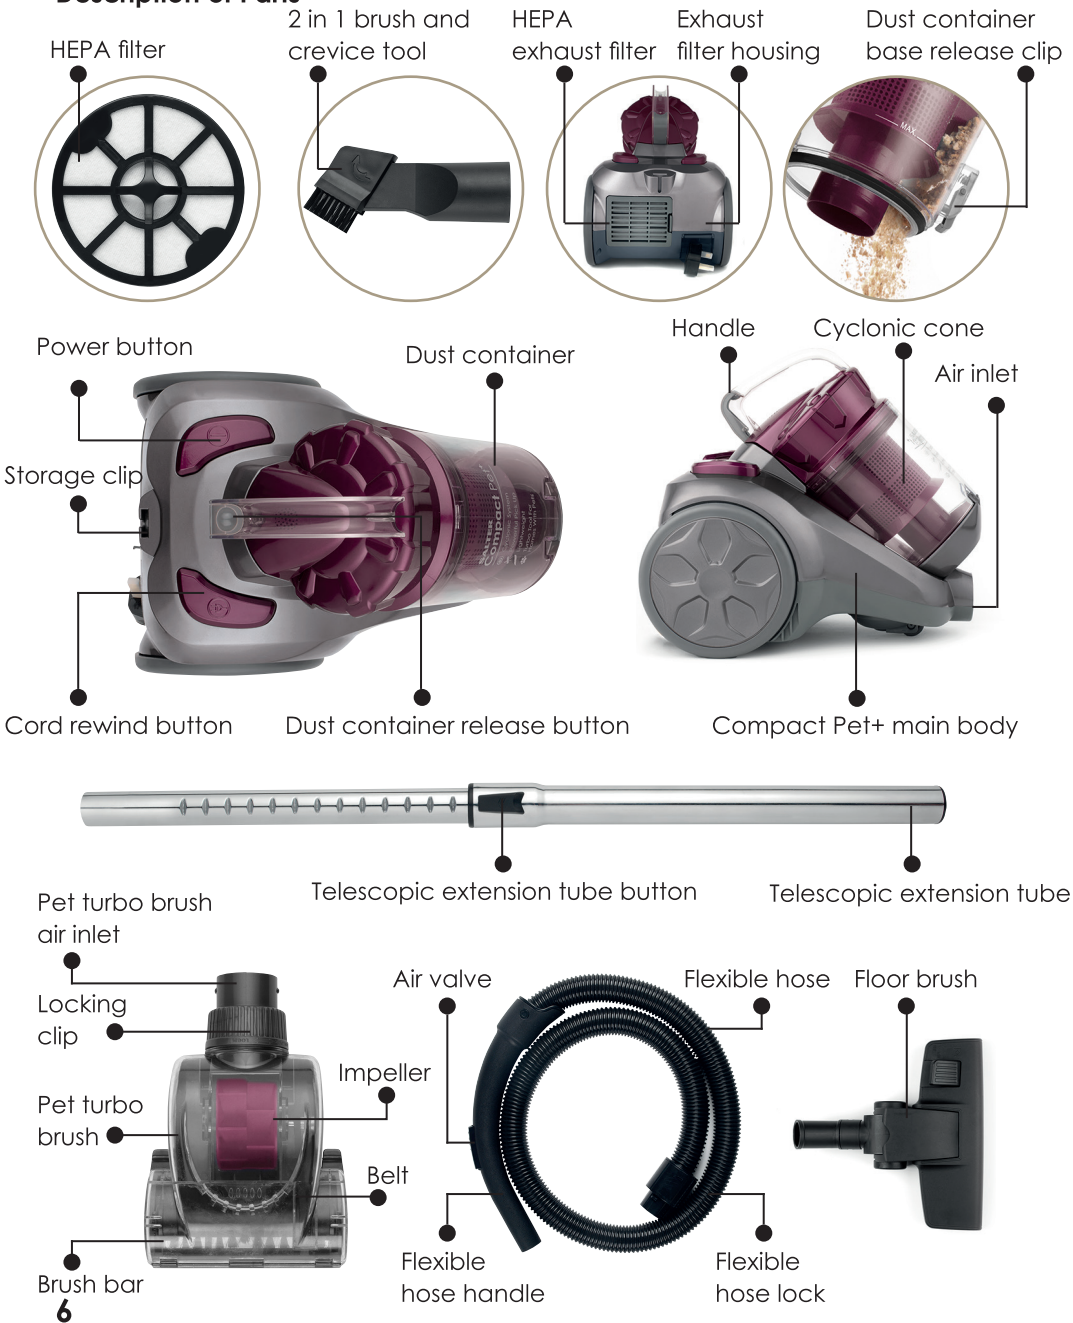

Instructions for Use

Before First Use

Before using the Compact Pet⁺ for the first time, wipe all parts with a soft, damp cloth and dry thoroughly.

Do not immerse the Compact Pet⁺ in water or any other liquid.

Assembling the Compact Pet⁺

STEP 1: Fit the dust container by pushing it onto the Compact Pet⁺ main body, ensuring that the clip on the back of the dust container is aligned with the latch on the Compact Pet⁺ main body.

STEP 2: To fit the flexible hose, insert the flexible hose lock into the air inlet and twist it 90 ° in a clockwise direction until it secures into position.

STEP 3: Insert the telescopic extension tube into the flexible hose handle until it connects into place.

STEP 4: Add the floor brush to the other end of the telescopic extension tube.

Caution: Do not over-rotate the flexible hose when inserting it into the air inlet.

Using the Telescopic Extension Tube

The 2 in 1 brush and crevice tool and pet turbo brush both fit onto the telescopic extension tube to help to reach into confined spaces, such as behind radiators or underneath car seats.

STEP 1: Adjust the telescopic extension tube to the required length by pressing the telescopic extension tube button down and sliding the inner tube outwards.

STEP 2: Release the telescopic extension tube button to lock it into position at the selected length.

STEP 3: Retract the aluminium extension tube by pushing the telescopic extension tube button and sliding the inner tube inwards.

Using the Floor Brush

The floor brush is ideal for use on a variety of floor types; the position can be adjusted to suit carpets or hard floors.

STEP 1: Push the floor brush onto the end of the telescopic extension tube.

STEP 2: Adjust the telescopic extension tube to the required length following the instructions in the section entitled 'Using the Telescopic Extension Tube'.

STEP 3: Select which floor brush position is required for the floor type by adjusting the switch. Switching it forwards lifts the brush for use on carpet and switching it backwards lowers the brush for cleaning hard floors.

STEP 4: Carefully pull out the power supply cable until it is at a suitable length, ensuring that it does not exceed the red mark and then plug it into the mains power supply.

STEP 5: Turn on the Compact Pet⁺ by pressing the power button; press it again to switch it off.

Note: Do not use excessive force when using the floor brush.

Using the 2 in 1 Brush and Crevice Tool

The 2 in 1 brush and crevice tool is a multifunctional attachment which can be attached to either the telescopic extension tube or fitted directly onto the flexible hose handle. The crevice tool is designed to remove dust and dirt from folds in fabrics, corners and recesses, whilst the brush is good for cleaning curtains, shelves, cupboards and windowsills.

STEP 1: Attach the 2 in 1 brush and crevice tool onto the end of either the telescopic extension tube or the flexible hose handle.

STEP 2: Select which function is to be used by rotating the head to either the brush or crevice tool setting.

STEP 3: Turn on the Compact Pet⁺ by pressing the power button; press it again to switch it off.

Using the Pet Turbo Brush

The pet turbo brush is perfect for removing stubborn pet hair from carpets, sofas, curtains and car upholstery, as well as hard floors. It fits comfortably onto either the telescopic extension tube or the flexible hose handle.

STEP 1: Attach the pet turbo brush onto the end of either the telescopic extension tube or the flexible hose handle.

STEP 2: Turn on the Compact Pet⁺ by pressing the power button; press it again to switch it off.

Note: Clean the pet turbo brush after use following the instructions in the section entitled 'Cleaning the Pet Turbo Brush'.

Caution: Do not use the pet turbo brush on people or animals.

Cleaning the Pet Turbo Brush

After regular use, the pet turbo brush may become clogged by pet hair and other debris. To maintain optimum performance, it needs to be cleaned regularly.

STEP 1: Remove the pet turbo brush from the telescopic extension tube or flexible hose handle.

STEP 2: Unscrew the locking ring from the pet turbo brush air inlet by rotating it in an anticlockwise direction. This will enable access to the brush bar, belt and impeller.

STEP 3: The brush bar and impeller can now be lifted out of the pet turbo brush, allowing for any built-up debris to be removed.

STEP 4: Once the pet turbo brush has been cleaned thoroughly, replace the brush bar, checking that the belt is attached correctly and that the spindle end of the impeller is correctly aligned with the corresponding slot on the brush bar.

STEP 5: Reattach the top back onto the pet turbo brush, aligning the locking tabs at the front first, and then pushing the top into position to secure.

STEP 6: Screw the locking ring back into position by rotating it in a clockwise direction on the pet turbo brush air inlet.

Note: Take care when clearing the pet turbo brush due to the number of small parts.

Emptying the Dust Container

Before emptying the dust container, ensure that the Compact Pet⁺ is switched off and unplugged from the mains power supply. It is recommended to empty the dust container outdoors. The dust container and HEPA filter need to be cleaned regularly to preserve suction and prolong the life of the vacuum cleaner.

STEP 1: Remove the dust container by pressing the dust container release button and pulling it away from Compact Pet⁺ main body.

STEP 2: Holding the dust container over a bin, open the dust container base by pulling the dust container base release clip. Empty the dust container slowly and carefully to reduce the amount of dust released back into the atmosphere. Shake the dust container gently to remove any residual dust.

STEP 3: To close the dust container, push the base closed until it locks back into position.

STEP 4: Replace the dust container by pushing it back into the Compact Pet⁺ main body, ensuring that the dust container base release clip is aligned with the recess on the Compact Pet⁺ main body.

Cleaning the HEPA Filter

The HEPA filter can only be accessed when the dust container has been removed.

STEP 1: Remove the dust container by pressing the dust container release button and pulling it away from the Compact Pet⁺.

STEP 2: Remove the lid from the dust container by rotating it in an anticlockwise direction and lifting it away from the dust container.

STEP 3: Pull the HEPA filter away from the dust container.

STEP 4: Shake the HEPA filter until the majority of the dust has been removed, then rinse under clean, warm water and allow it to dry naturally.

STEP 5: Once the HEPA filter is fully dry, slot it back into the dust container. Refit the dust container to the Compact Pet⁺ main body.

Note: Do not clean the HEPA filter using detergents or use external heat sources such as radiators to dry it.

Warning: Do not use the Compact Pet⁺ without the HEPA filter in place.

Cleaning the HEPA Exhaust Filter

STEP 1: To remove the HEPA exhaust filter, press down the clip on the right hand side of the exhaust filter cover and lift it away.

STEP 2: Take the HEPA exhaust filter out of the exhaust filter housing and shake it until the majority of the dust has been removed. Rinse it under clean, warm water and allow it to dry naturally.

STEP 3: Once the HEPA exhaust filter has dried fully, slot it back into the exhaust filter housing and replace the exhaust filter cover.

Note: The HEPA exhaust filter needs to be cleaned regularly; do not clean the HEPA exhaust filter using detergents or use external heat sources such as radiators to dry it.

Warning: Do not use the Compact Pet⁺ without the HEPA exhaust filter in place.

Cord Storage

STEP 1: Ensure that the Compact Pet⁺ is switched off and unplugged from the mains power supply.

STEP 2: Press and hold the cable rewind button until the power supply cord has completely wound back into the cable drum. To prevent injury, hold onto the plug to guide the power supply cord back into the Compact Pet⁺.

STEP 3: Remove the floor brush and position it in the storage clip for easy storage.

Troubleshooting

Symptom	Possible Cause	Solution
The suction is poor.	The telescopic extension tube or air inlet is blocked.	Disconnect the accessory and remove the blockage.
	The dust container is almost full.	Empty the dust container following the instructions in the section entitled 'Emptying the Dust Container'.
	The HEPA filter is blocked.	Clean the HEPA filter following the instructions in the section entitled 'Cleaning the HEPA Filter'.
	The HEPA exhaust filter is blocked.	Clean the HEPA exhaust filter following the instructions in the section entitled 'Cleaning the HEPA Exhaust Filter'.
The Compact Pet ⁺ has cut-out or stopped working.	The thermal cut-out device has activated due to restricted air flow, and has cut power to the motor to protect it from damage.	Turn off and unplug the Compact Pet ⁺ from the mains power supply. Empty the dust container and clean the HEPA filter. Allow to cool for 1 hour.

Specifications

Product code: SAL0004AB

Rated voltage: 220–240 V ~ 50/60 Hz

Rated wattage: 700 W

Notes

Connection To The Mains

Please check that the voltage indicated on the product corresponds with your supply voltage.

Important

As the colours in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, please proceed as follows:

The wires in the mains lead are coloured in accordance with the following code:

Blue Neutral (N)

Brown Live (L)

FOR UK USE ONLY - Plug fitting details
(where applicable).

The wire coloured **BLUE** is the **NEUTRAL** and must be connected to the terminal marked **N** or coloured **BLACK**.


The wire coloured **BROWN** is the **LIVE** wire and must be connected to the terminal marked **L** or coloured **RED**.

On no account must either the **BROWN** or the **BLUE** wire be connected to the **EARTH** terminal (\perp).

Always ensure that the cord grip is fastened correctly.

The plug must be fitted with a fuse of the same rating already fitted and conforming to BS 1362 and be ASTA approved.

If in doubt, consult a qualified electrician who will be pleased to do this for you.

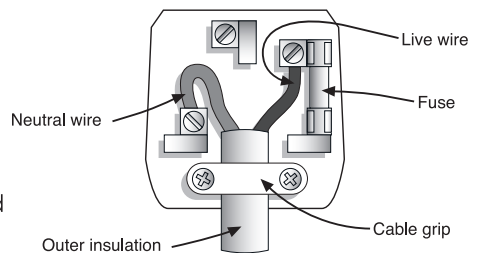

Non-Rewireable Mains Plug

If your appliance is supplied with a non-rewireable plug fitted to the mains lead and should the fuse need replacing, you must use one that is ASTA approved one (conforming to BS 1362 of the same rating).

If in doubt, consult a qualified electrician who will be pleased to do this for you.

If you need to remove the plug, **DISCONNECT IT FROM THE MAINS**, then cut it off the mains lead and immediately dispose of it safely. Never attempt to reuse the plug or insert it into a socket outlet as there is a danger of an electric shock.

**UP Global Sourcing UK Ltd.,
Victoria Street, Manchester OL9 0DD. UK.**

If this product does not reach you in an acceptable condition please contact our Customer Services Department by one of the following methods:

Telephone: 0161 934 2240*

*Telephone lines are open Monday–Friday, 9 am–5 pm (Closed Bank Holidays)

Email: customercare@upgs.com

Fax: 0161 628 2126

Please have your delivery note to hand as details from it will be required.

If you wish to return this product, please return it to the retailer from where it was purchased with your receipt (subject to their terms and conditions).

Guarantee

All products purchased as new carry a manufacturer's guarantee; the time period of the guarantee will vary dependent upon the product. Where reasonable proof of purchase can be provided, Salter will provide a standard 12 month guarantee with the retailer from the date of purchase. This is only applicable when products have been used as instructed for their intended, domestic use. Any misuse or dismantling of products will invalidate any guarantee.

Under the guarantee, we undertake to repair or replace free of any charge any parts found to be defective. In the event that we cannot provide an exact replacement, a similar product will be offered or the cost refunded. Any damages from daily wear and tear are not covered by this guarantee, nor are consumables such as plugs, fuses etc.

Please note that the above terms and conditions may be updated from time to time and we therefore recommend that you check these each time you revisit the website.

Nothing in this guarantee or in the instructions relating to this product excludes, restricts or otherwise affects your statutory rights.

The crossed out wheelie bin symbol on this item indicates that this appliance needs to be disposed of in an environmentally friendly way when it becomes of no further use or has worn out. Contact your local authority for details of where to take the item for recycling.



*To be eligible for the extended guarantee,
go to www.saltercookshop.com
and register your product.



Find us on 

www.facebook.com/SalterCookshop



Manufactured by:

UP Global Sourcing UK Ltd.,
Victoria Street,
Manchester OL9 0DD. UK.

Made in China.



SALTER®

CD141116/MD150917/V2